
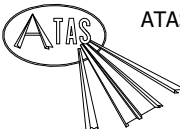


Rapid-Lok SL Coping Cover Splice Installation Detail

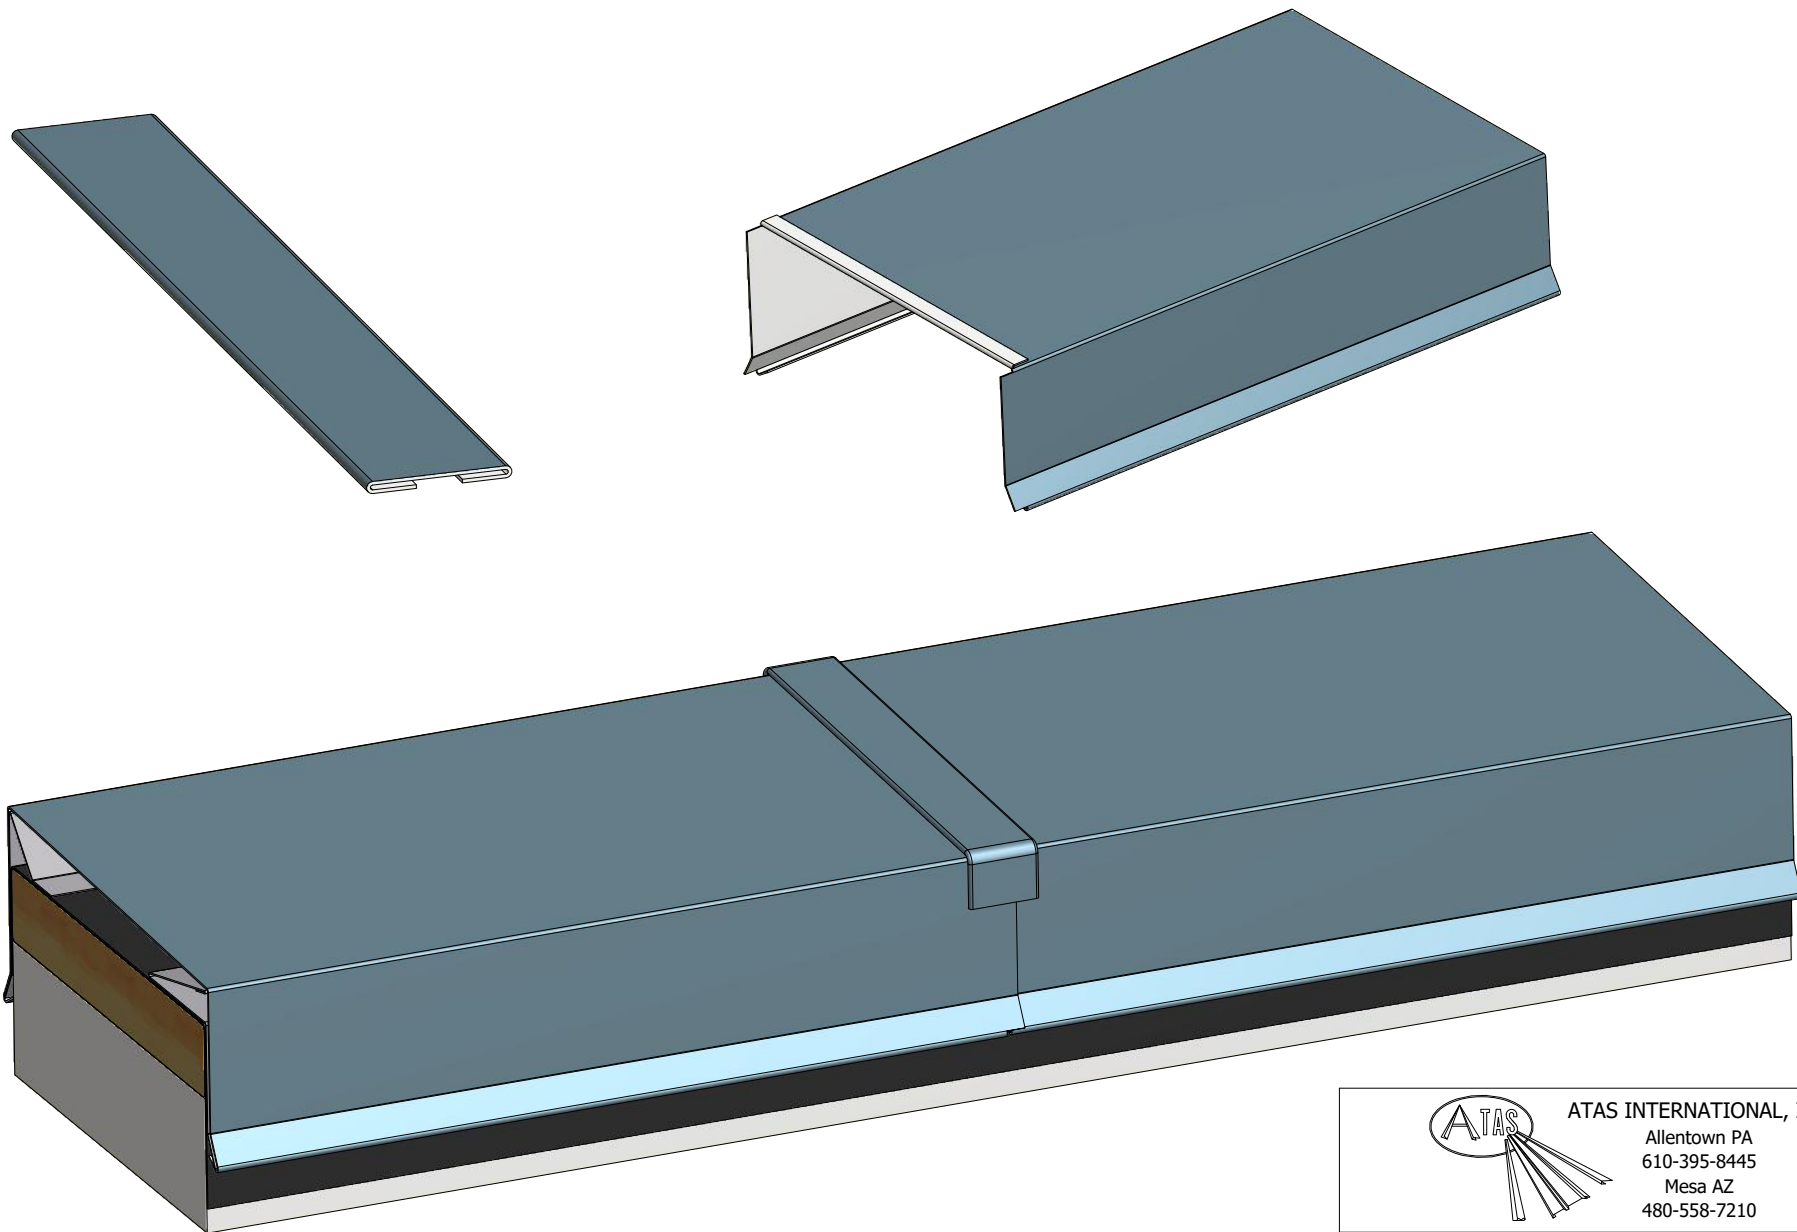

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210


TITLE			Rapid-Lok SL Coping Drive Cleat Detail		
DWG. NO.			DR	KRK	DATE 4/3/2024
MATERIAL			APP		DATE
			SH. SIZE	A	SCALE X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP



					TITLE Rapid-Lok SL Coping Drive Cleat Detail				
					DWG. NO.			DR KRK	DATE 4/3/2024
					MATERIAL			APP	DATE
								SH. SIZE A	SCALE X:X
REV. NO.	DATE	DESCRIPTION OF REVISION			BY	APP			


Step 2

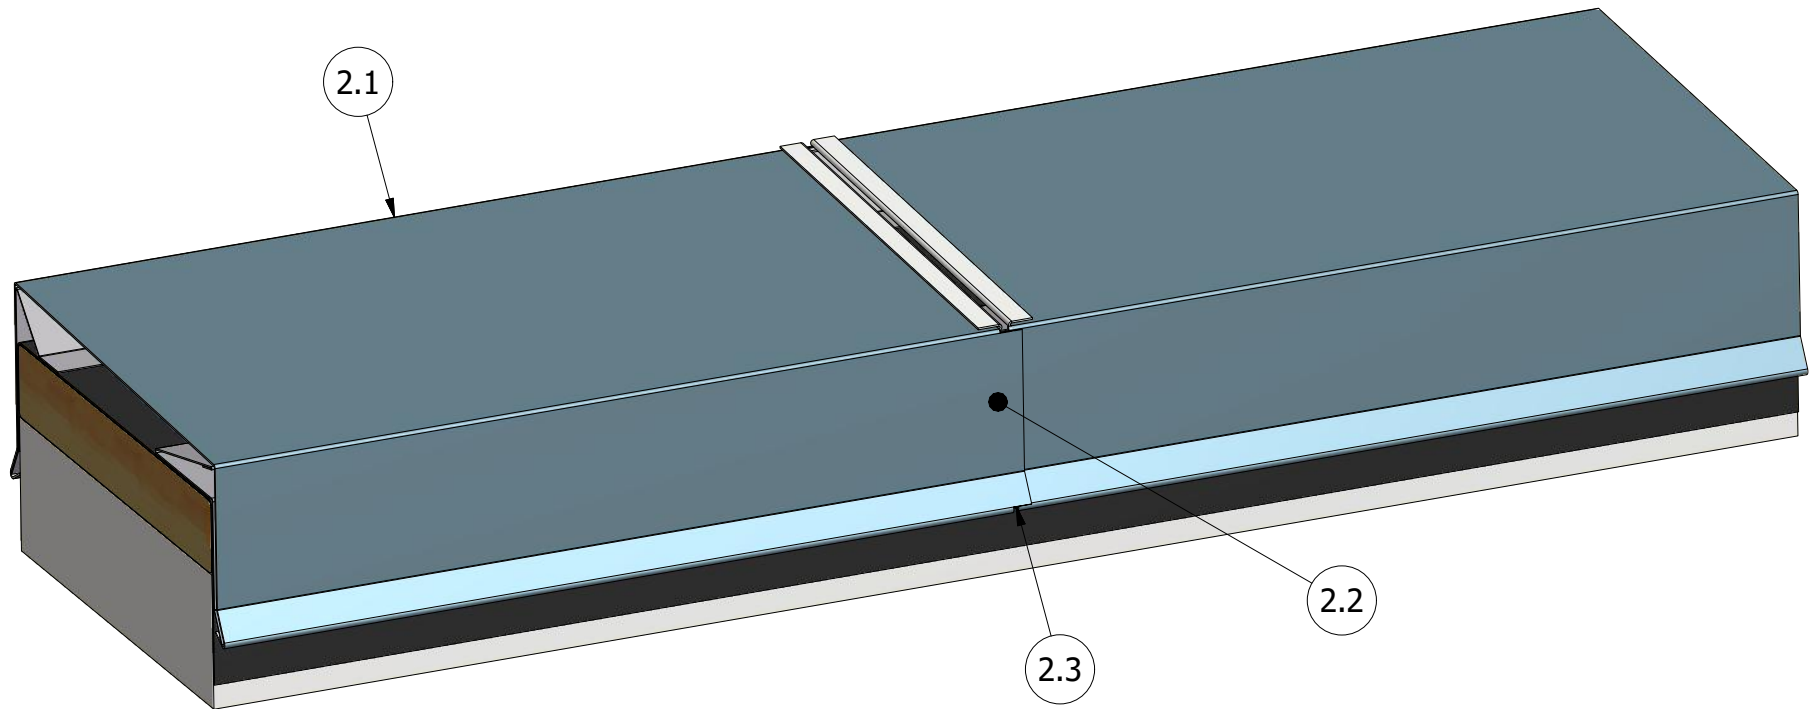

Step 2.1 Install Factory Pre-Notched Coping Cover on Cleats.




Step 2.2 Overlap Coping Covers on the front and back.

Step 2.3 Leave a 3/16" Gap at Coping Hems for Cover Expansion and Contraction.

 ATAS INTERNATIONAL, INC Allentown PA 610-395-8445 Mesa AZ 480-558-7210		TITLE	
		Rapid-Lok SL Coping Drive Cleat Detail	
DWG. NO.		DR	DATE
		KRK	4/3/2024
MATERIAL		APP	DATE
		SH. SIZE	SCALE
		A	X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

Step 3

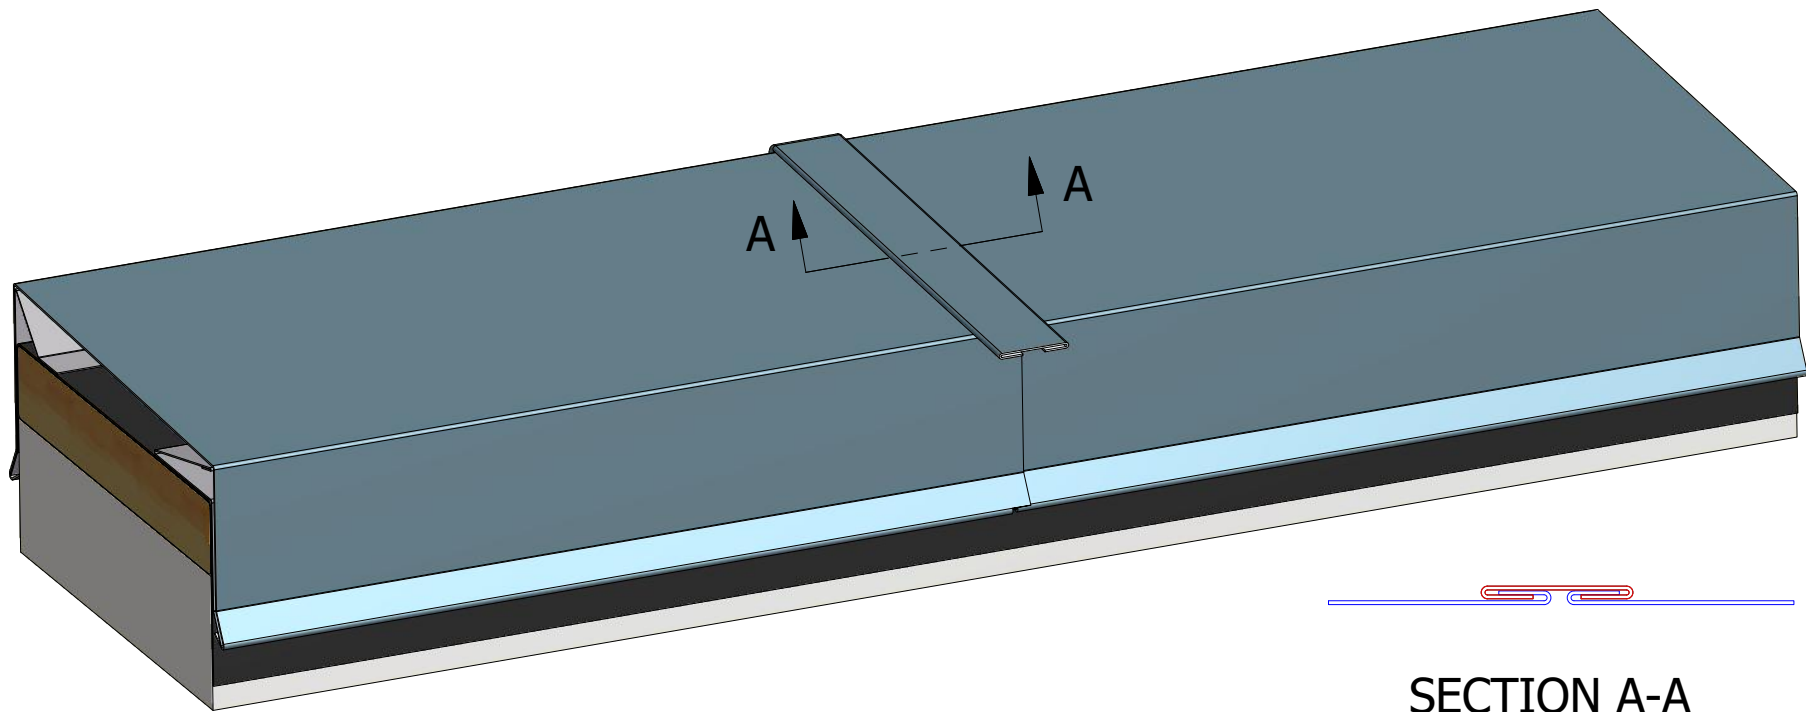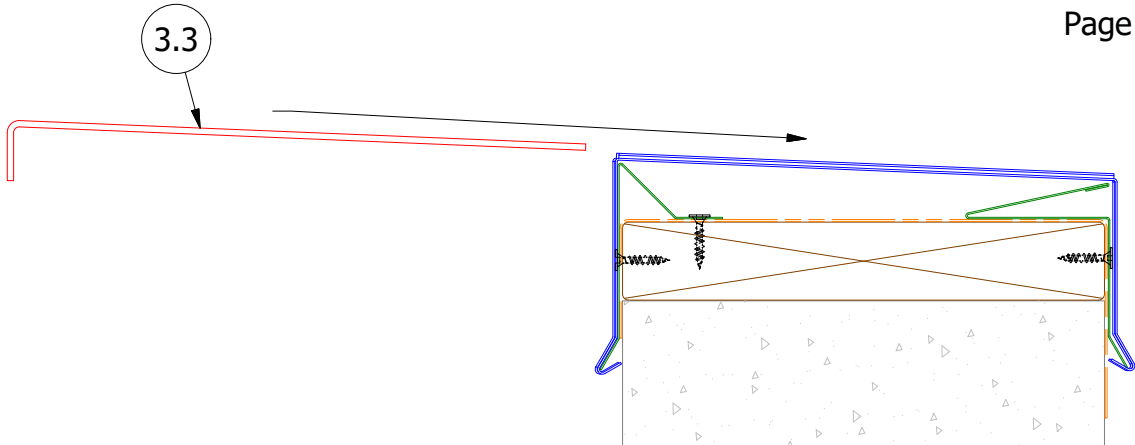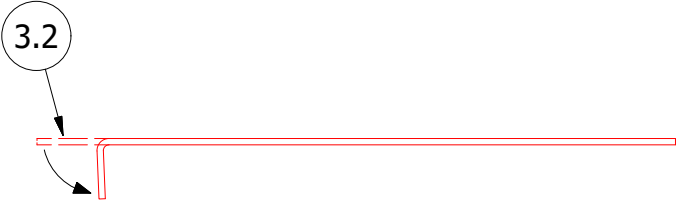


SECTION A-A

Step 3.1 Cut section of Drive Cleat out of 12'-0" lengths. (length of section = coping width + 2")

Step 3.2 Fold down front of Drive Cleat before installation as shown.



Step 3.3 Slide Drive Cleat onto Cover Hems.

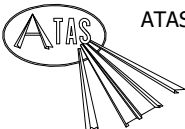


ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

				TITLE Rapid-Lok SL Coping Drive Cleat Detail			
				DWG. NO.		DR KRK	DATE 4/3/2024
				MATERIAL		APP	DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	SH. SIZE A	SCALE	X:X

Step 4

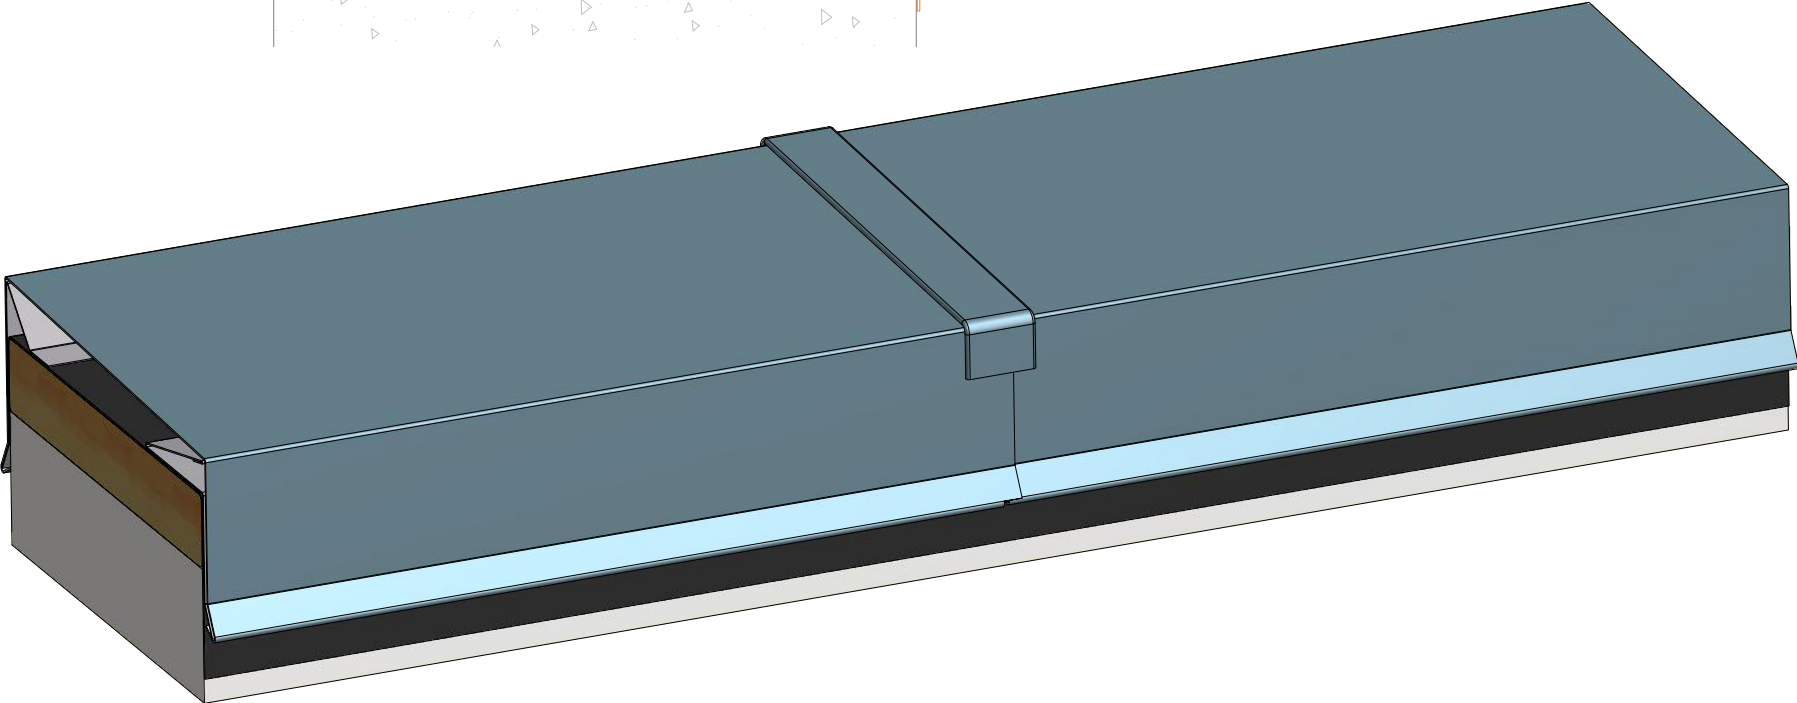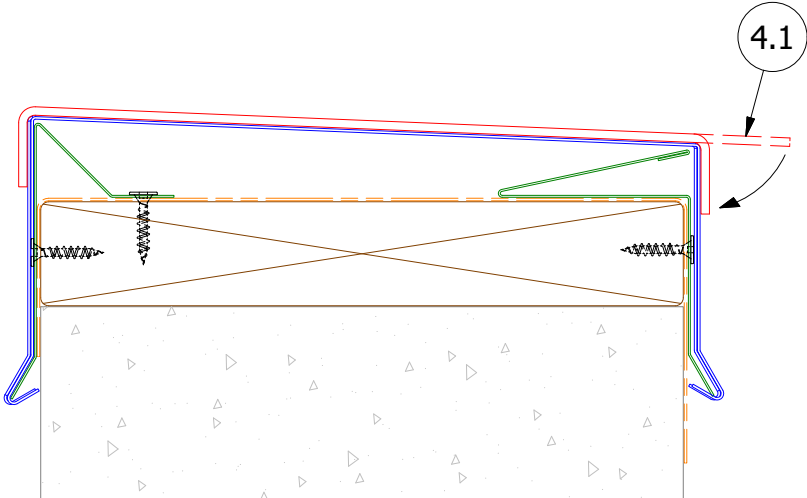

Step 4.1 Using a Rubber Mallet, hammer back of Drive Cleat down to secure into place.

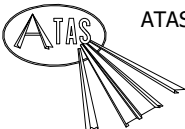

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

				TITLE		
				Rapid-Lok SL Coping Drive Cleat Detail		
				DWG. NO.	DR KRK	DATE 4/3/2024
				MATERIAL	APP	DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	SH. SIZE A	SCALE X:X