


Rapid-Lok SL Coping Drive Cleat Miter Installation Detail

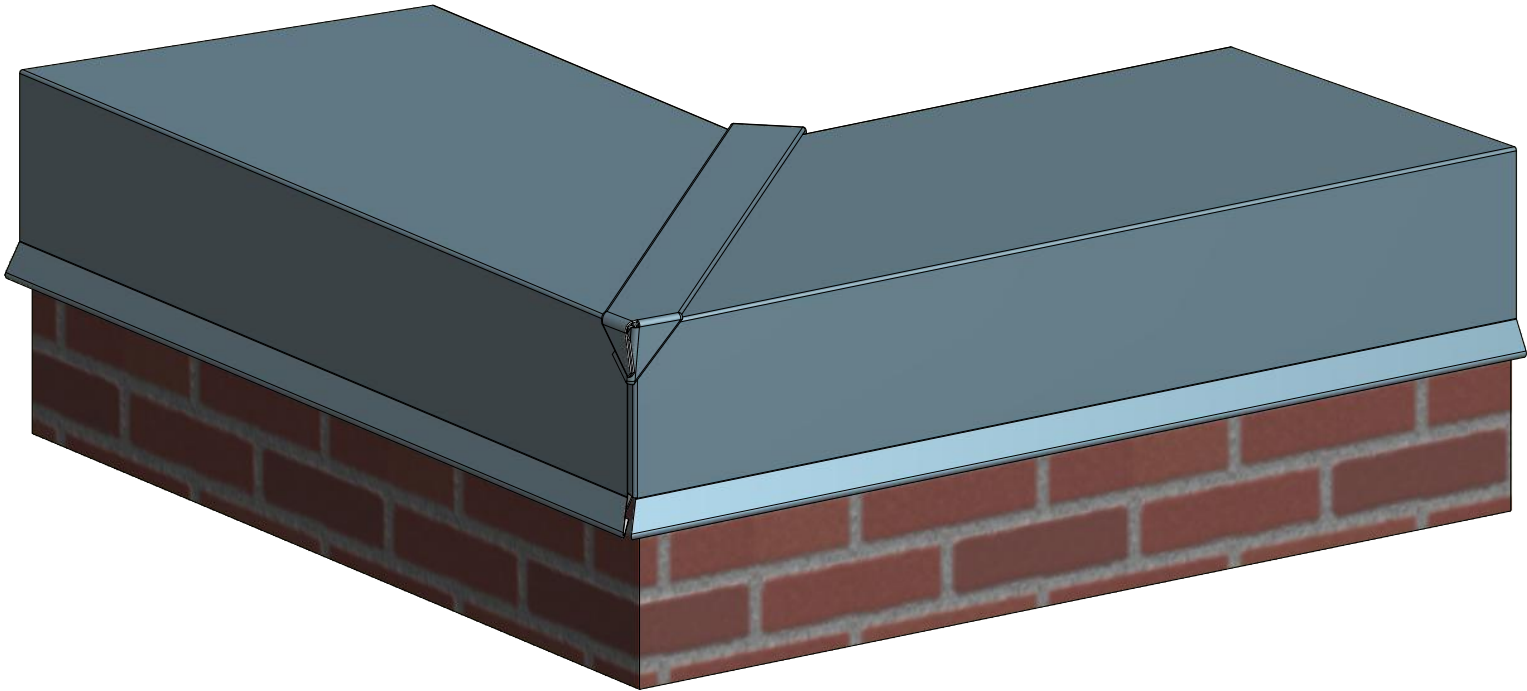

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210


TITLE
Rapid-Lok SL Coping Drive Cleat Miter Detail

					DWG. NO.	DR KRK	DATE 4/26/2024
					MATERIAL	APP	DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	SH. SIZE A	SCALE X:X	



					DWG. NO.			DR	KRK	DATE	4/26/2024
					MATERIAL			APP		DATE	
REV. NO.	DATE	DESCRIPTION OF REVISION			BY	APP	SH. SIZE	A	SCALE	X:X	

Step 2

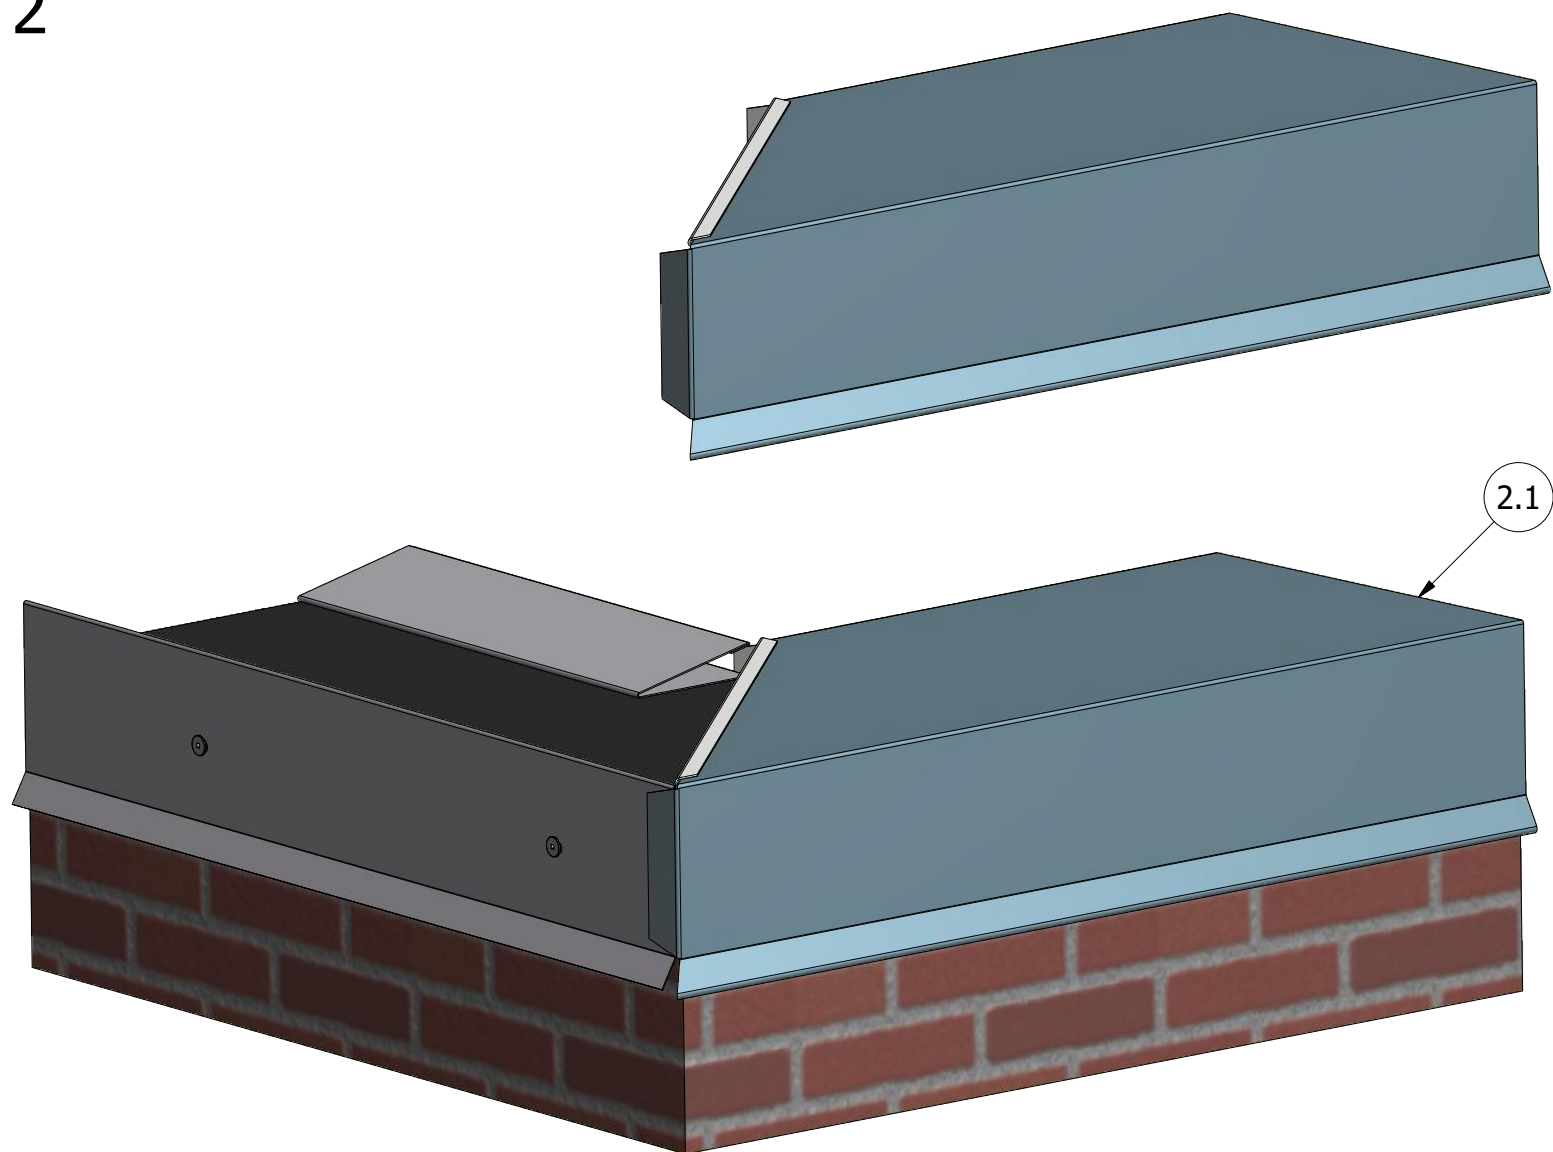

Step 2.1 Install Factory Pre-Notched Coping Miter on Cleats.




ATAS INTERNATIONAL, INC


Allentown PA
610-395-8445
Mesa AZ
480-558-7210

					Rapid-Lok SL Coping Drive Cleat Miter Detail		
					DWG. NO.	DR KRK	DATE 4/26/2024
					MATERIAL	APP	DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	SH. SIZE A		SCALE X:X

Step 3

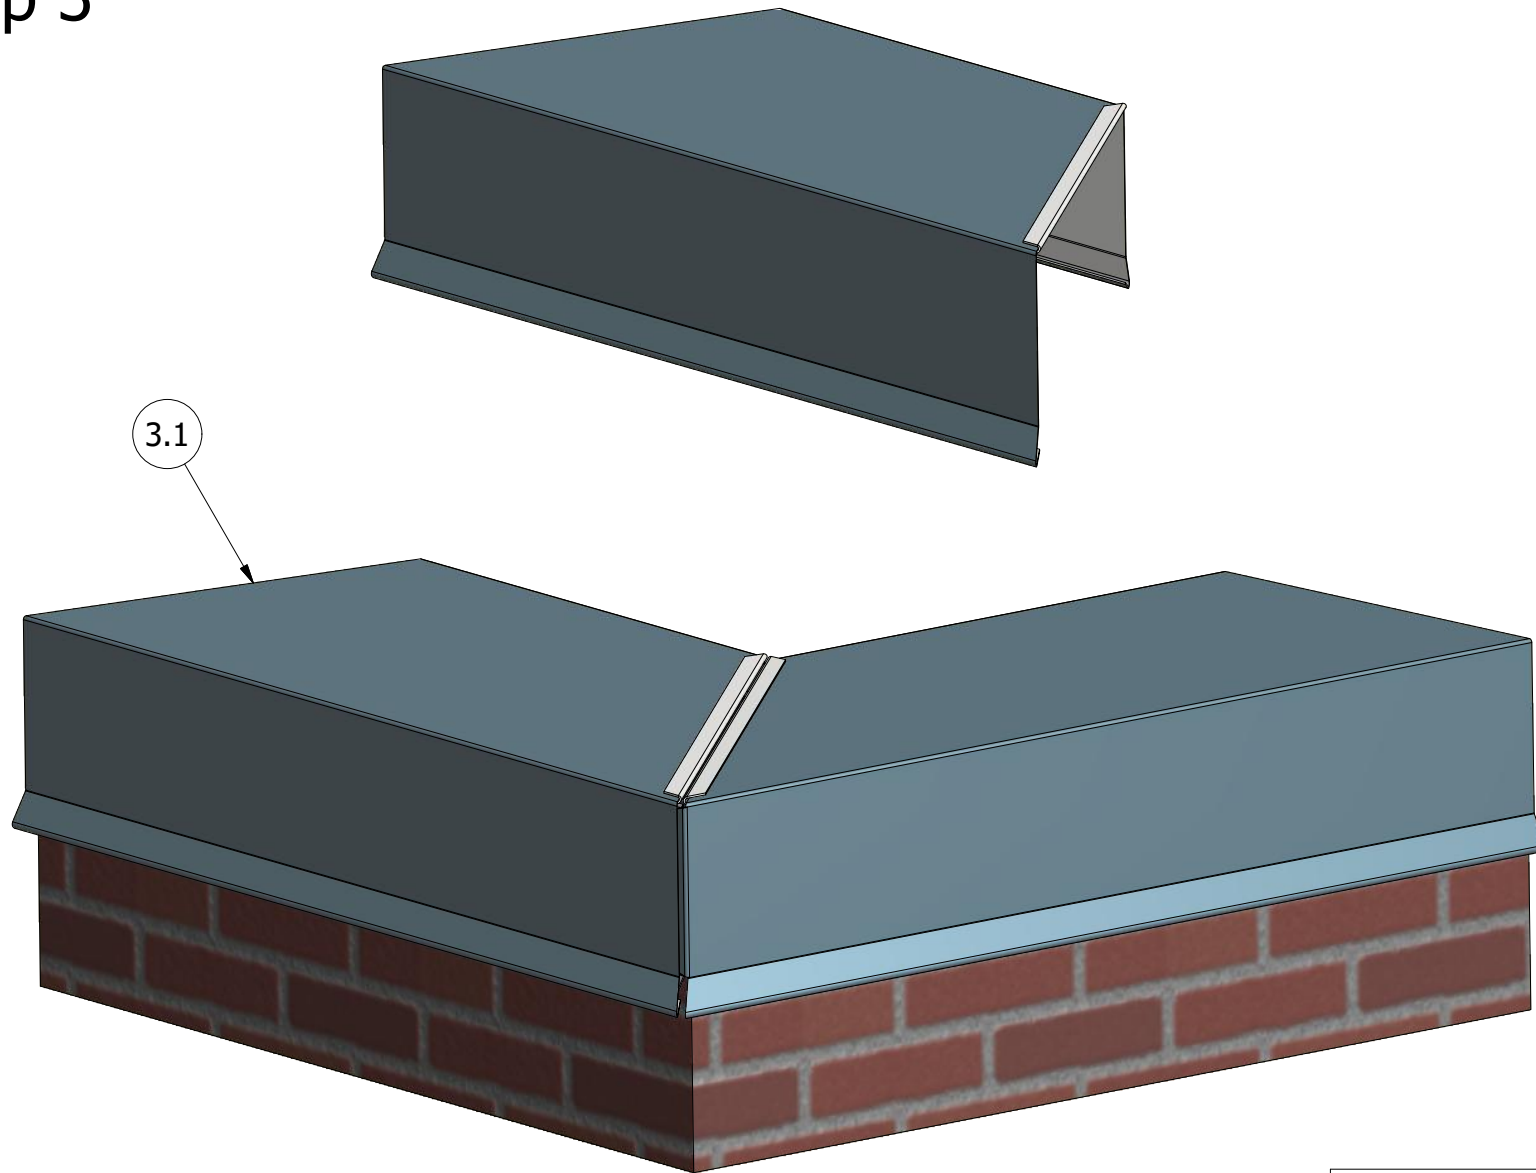

Step 3.1 Install Factory Pre-Notched Coping Miter on Cleats.

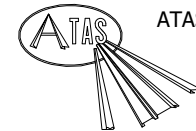

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210


					DWG. NO.			DR	KRK	DATE	4/26/2024
					MATERIAL			APP		DATE	
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP				SH. SIZE	A	SCALE	X:X

Step 4

Step 4.1 Cut the appropriate length of Drive Cleat, add 2" for Folds.

Step 4.2 Fold down 1" of Drive Cleat.

Step 4.3 Slide Drive Cleat from the backside as shown.

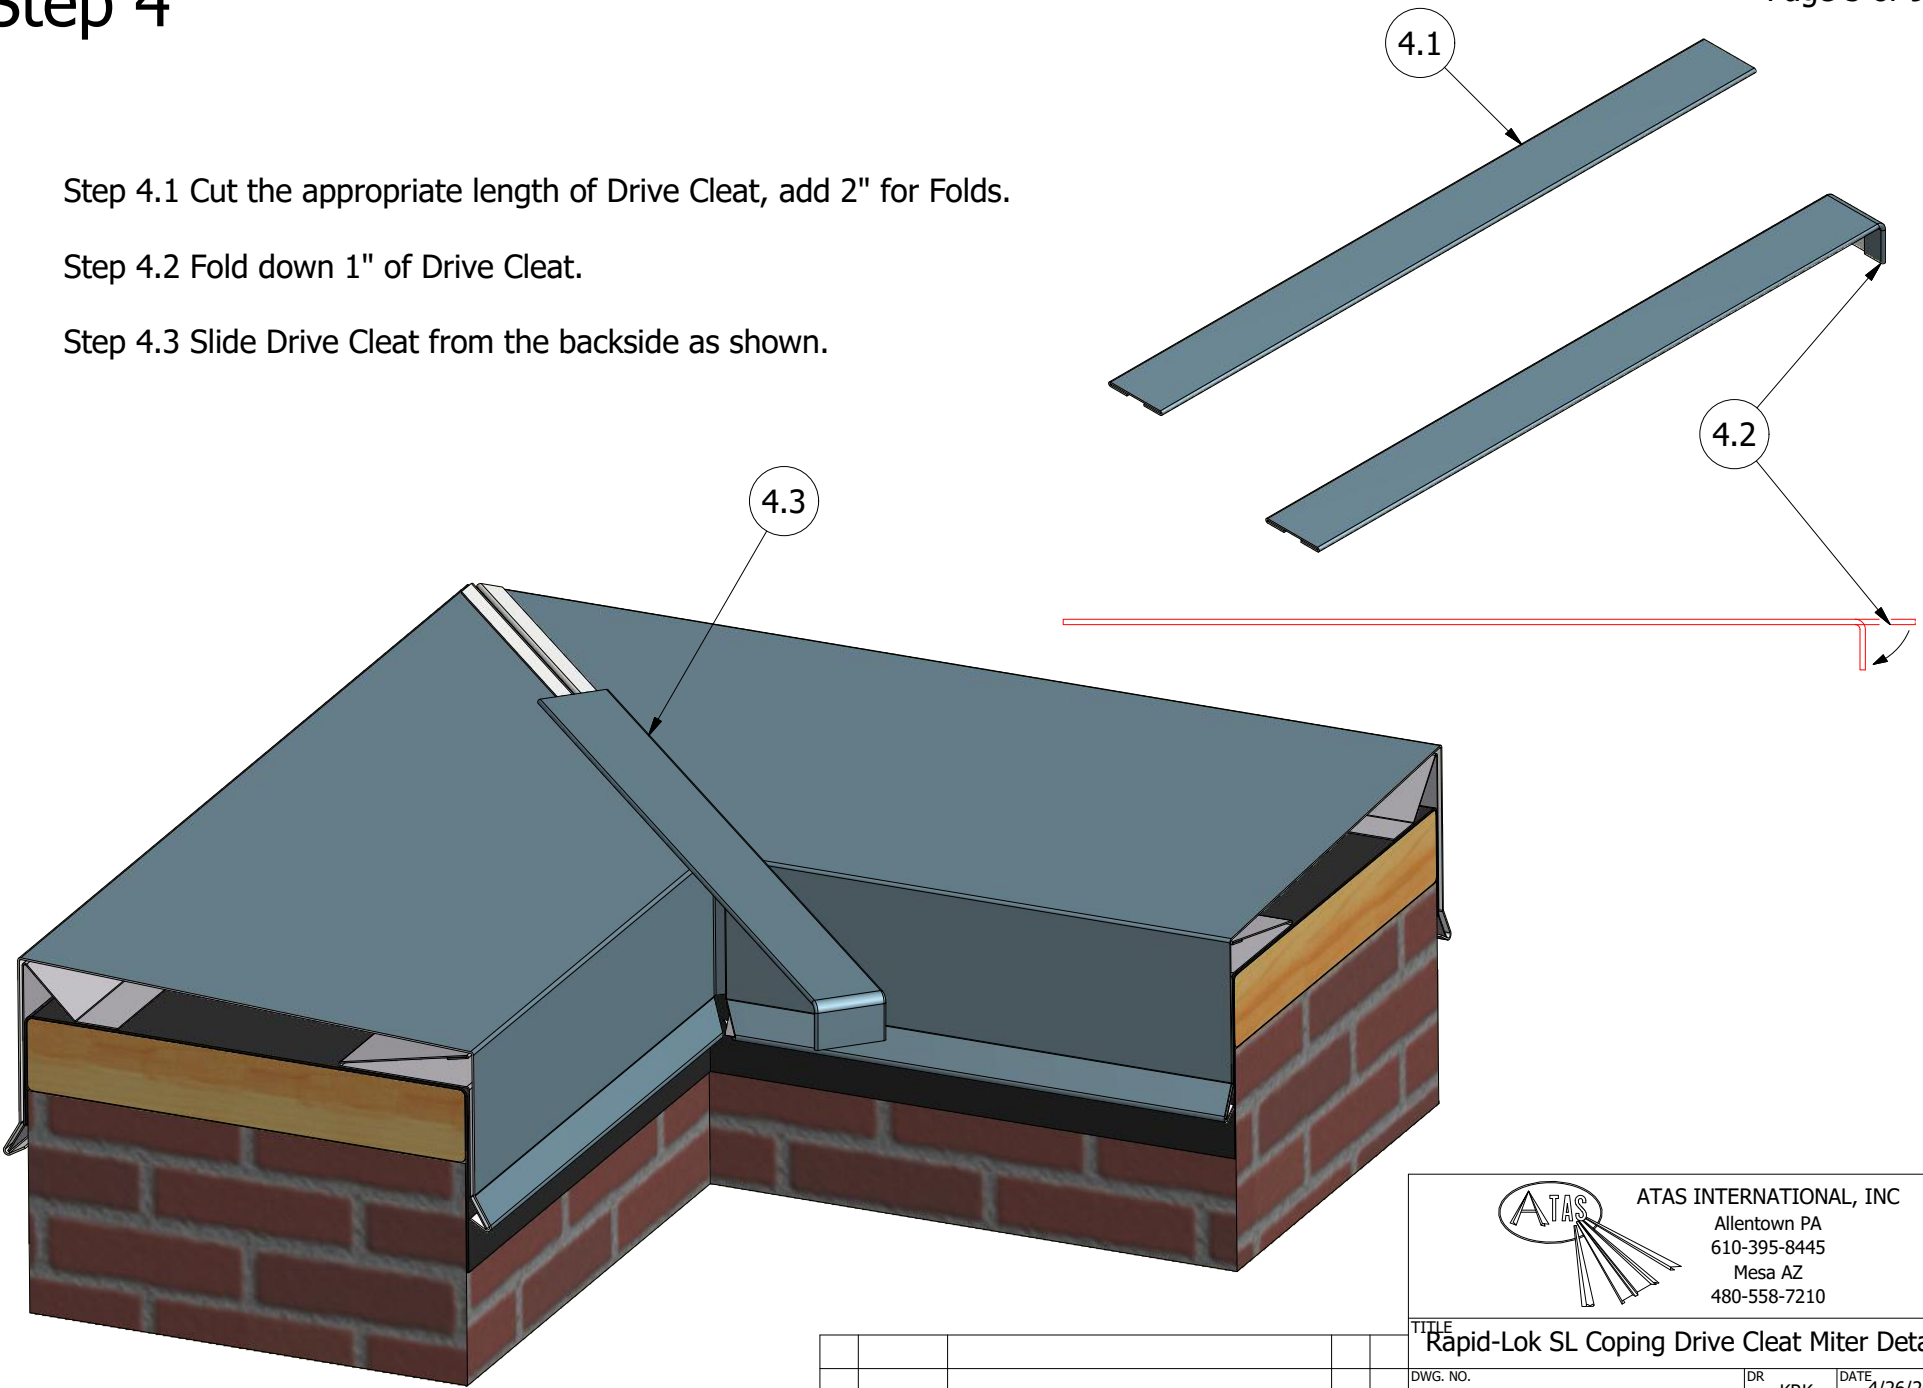




ATAS INTERNATIONAL, INC

Allentown PA
610-395-8445
Mesa AZ
480-558-7210

TITLE		Rapid-Lok SL Coping Drive Cleat Miter Detail	
DWG. NO.	DR	DATE	4/26/2024
MATERIAL	APP	DATE	
REV. NO.	DATE	SH. SIZE	SCALE
		A	X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

Step 5

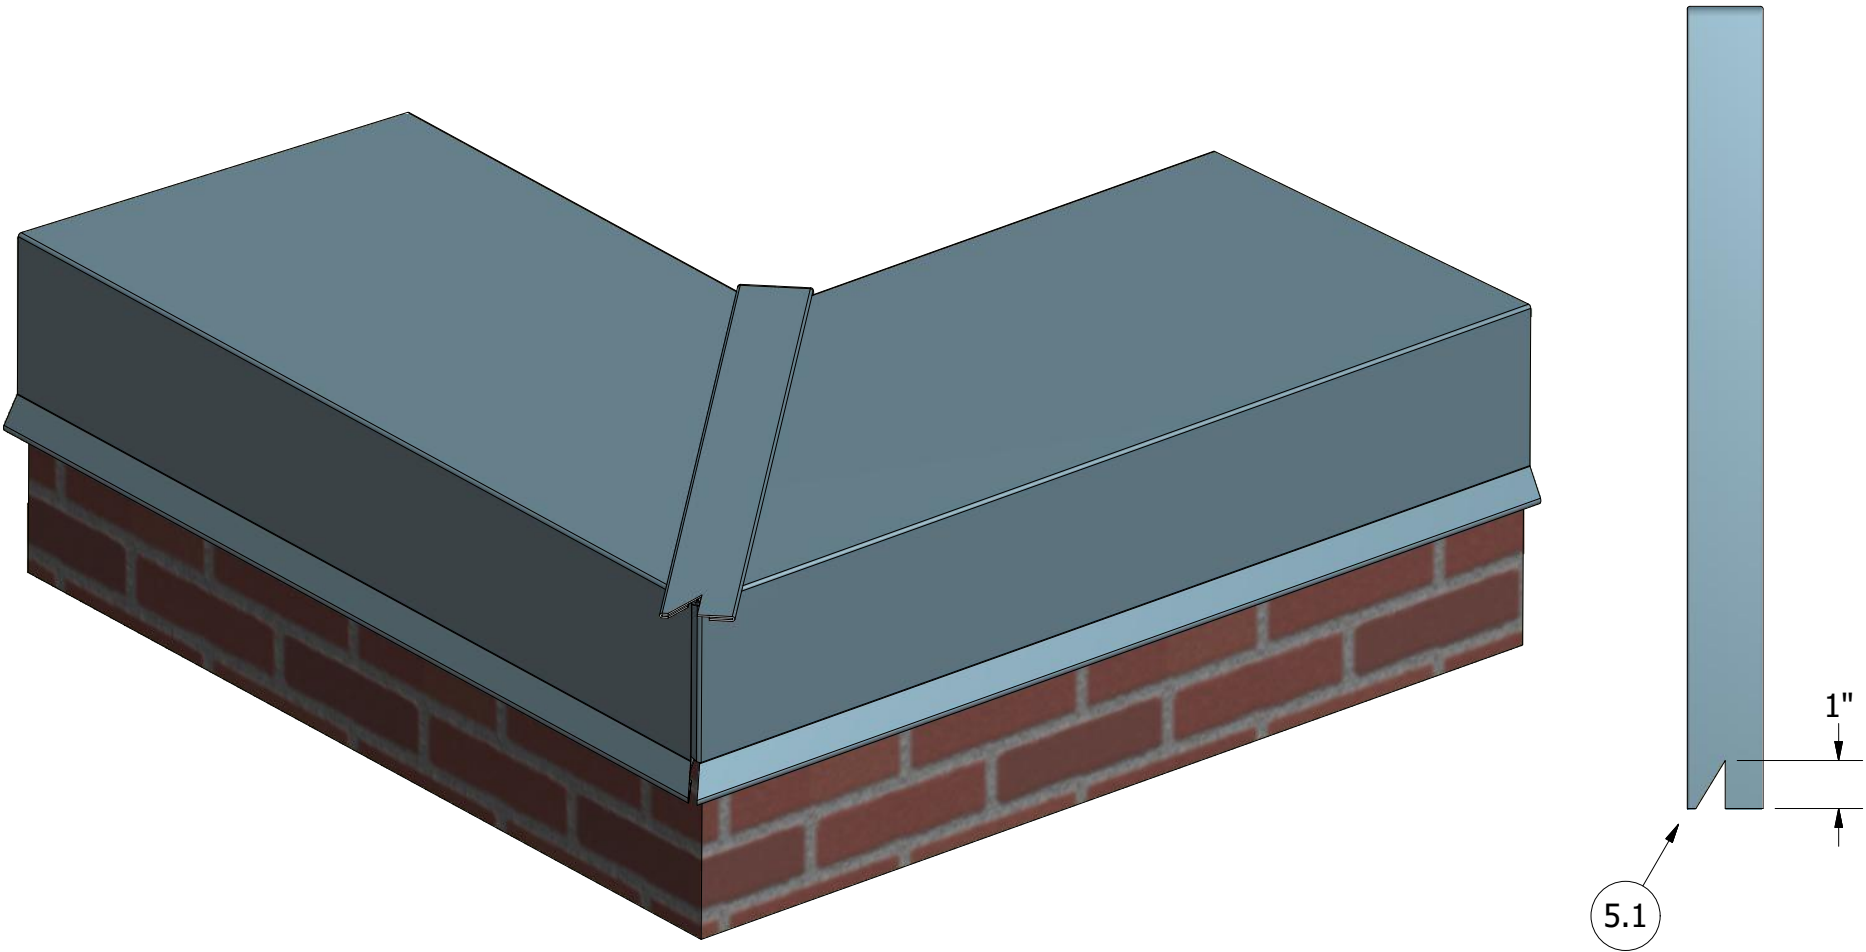

Step 5.1 Field Notch Drive Cleat 1" as shown.



ATAS INTERNATIONAL, INC

Allentown PA


610-395-8445

Mesa AZ


480-558-7210

					TITLE		
					Rapid-Lok SL Coping Drive Cleat Miter Detail		
					DWG. NO.	DR	DATE
						KRK	4/26/2024
					MATERIAL	APP	DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	SH. SIZE	A	SCALE
							X:X

Step 6

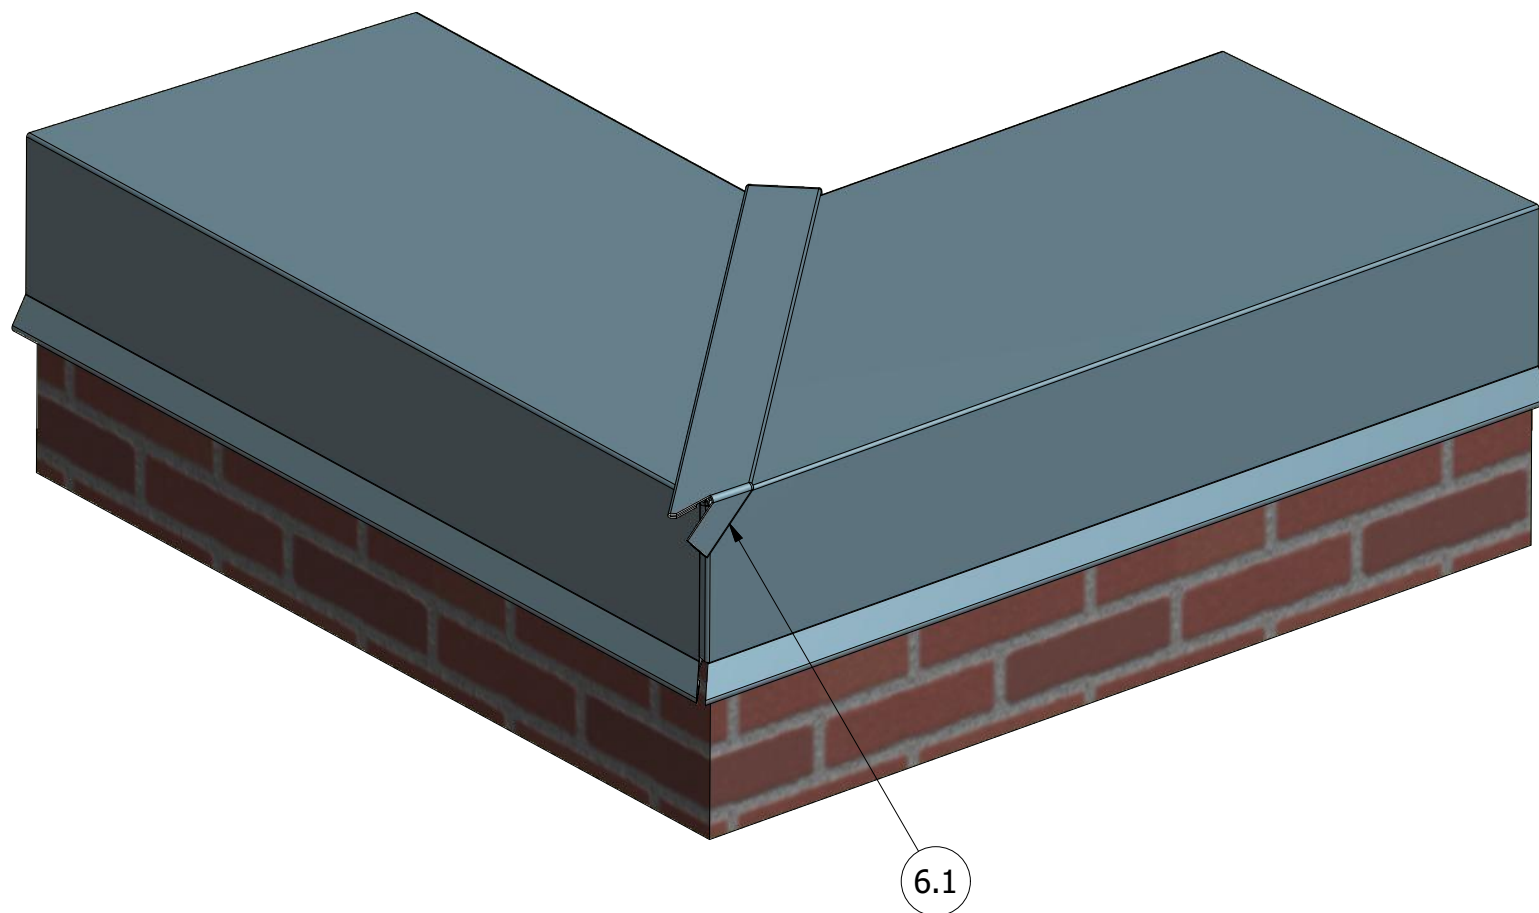


Step 6.1 Using a Rubber Mallet, hammer Drive Cleat as shown.

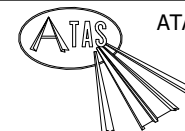

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

					Rapid-Lok SL Coping Drive Cleat Miter Detail				
					DWG. NO.			DR	DATE
								KRK	4/26/2024
					MATERIAL			APP	DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP				SH. SIZE	SCALE
								A	X:X

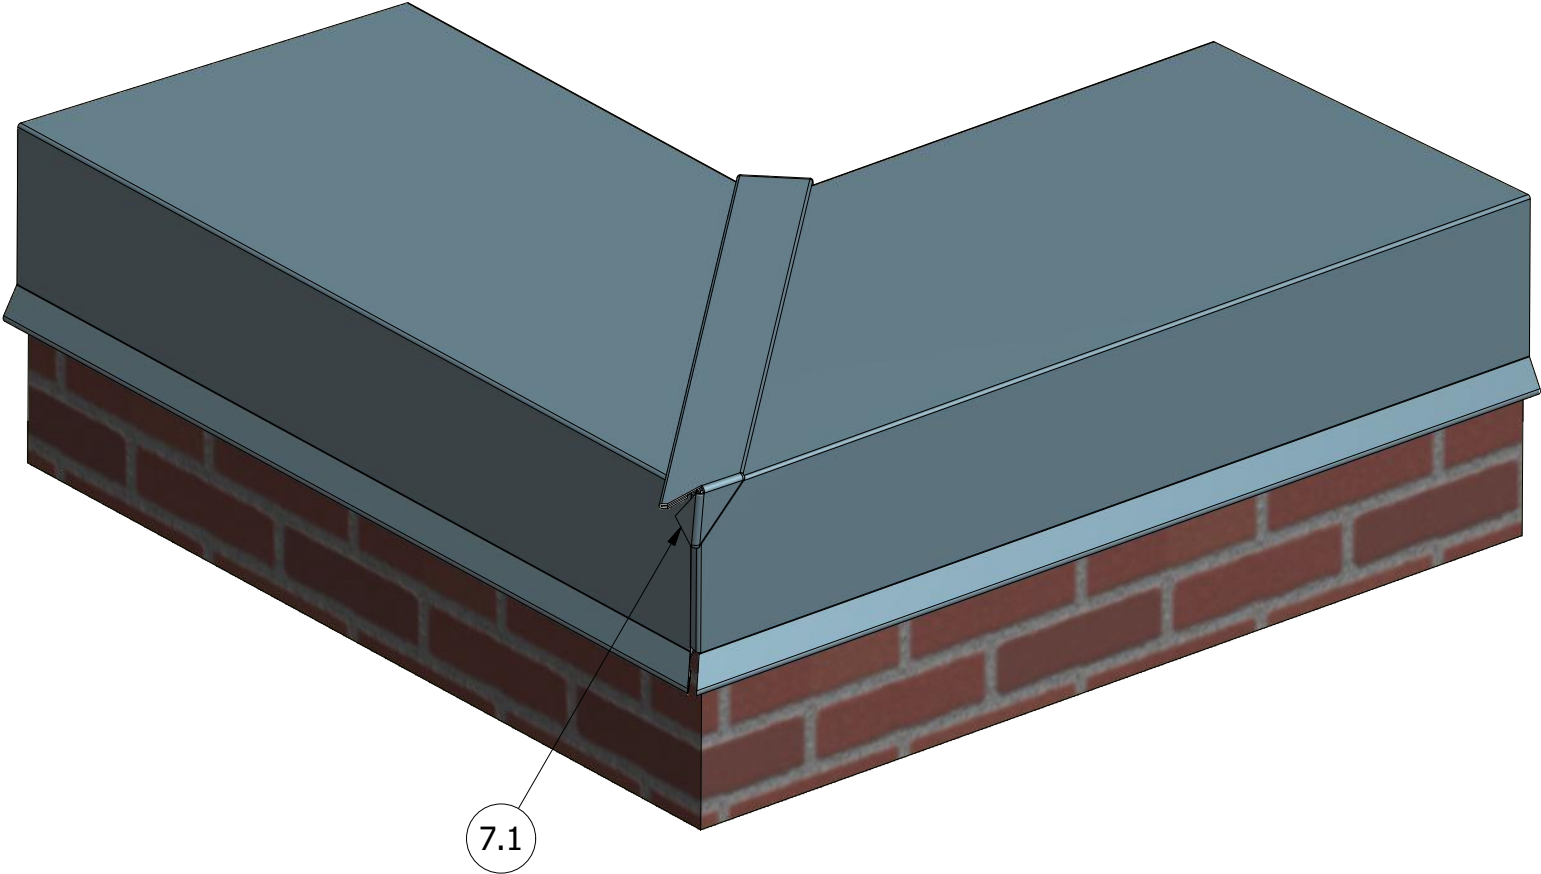

Step 7.1 Using a Rubber Mallet, hammer Drive Cleat as shown.




ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

TITLE
Rapid-Lok SL Coping Drive Cleat Miter Detail

DWG. NO.	DR KRK	DATE 4/26/2024
MATERIAL	APP	DATE
REV. NO.	SH. SIZE A	SCALE X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

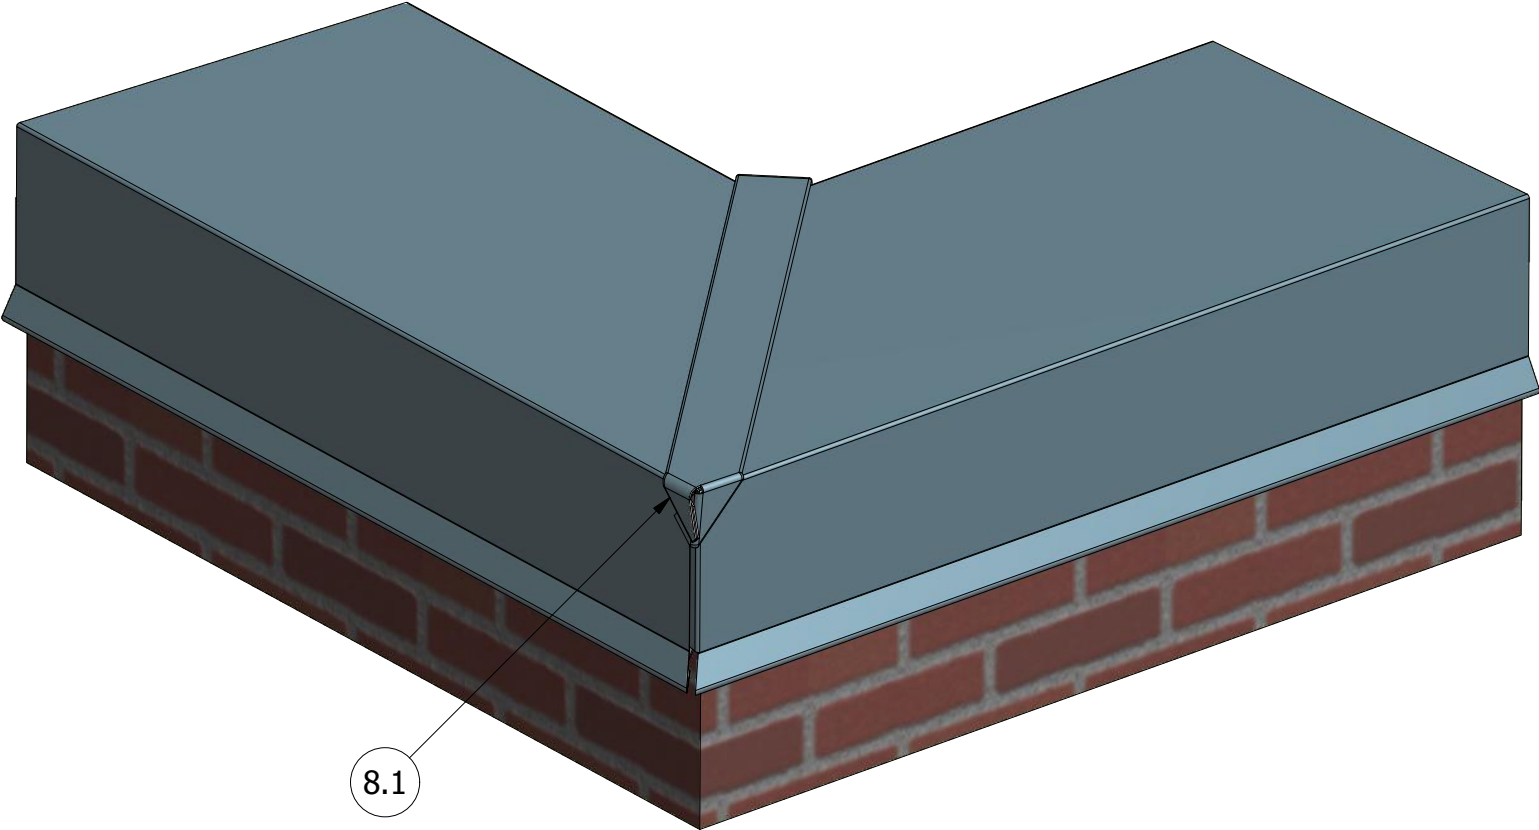

8.1

Step 8.1 Using a Rubber Mallet, hammer Drive Cleat as shown.



ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

TITLE			
Rapid-Lok SL Coping Drive Cleat Miter Detail			
DWG. NO.		DR	DATE
		KRK	4/26/2024
MATERIAL		APP	DATE
		SH. SIZE	SCALE
		A	X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	