

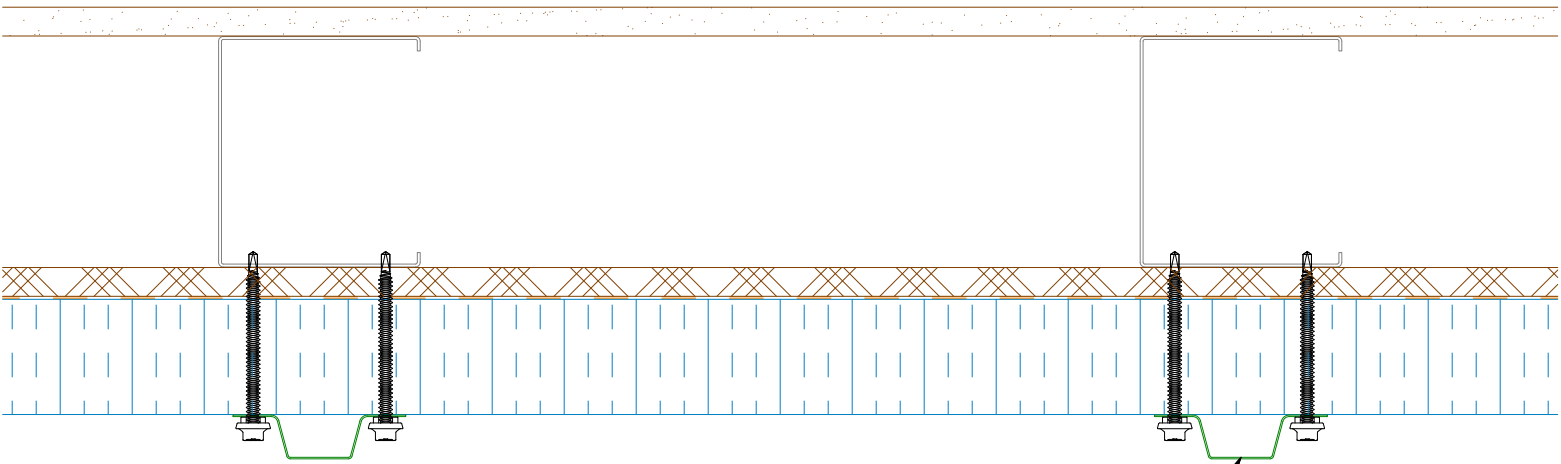




Horizontal Panel

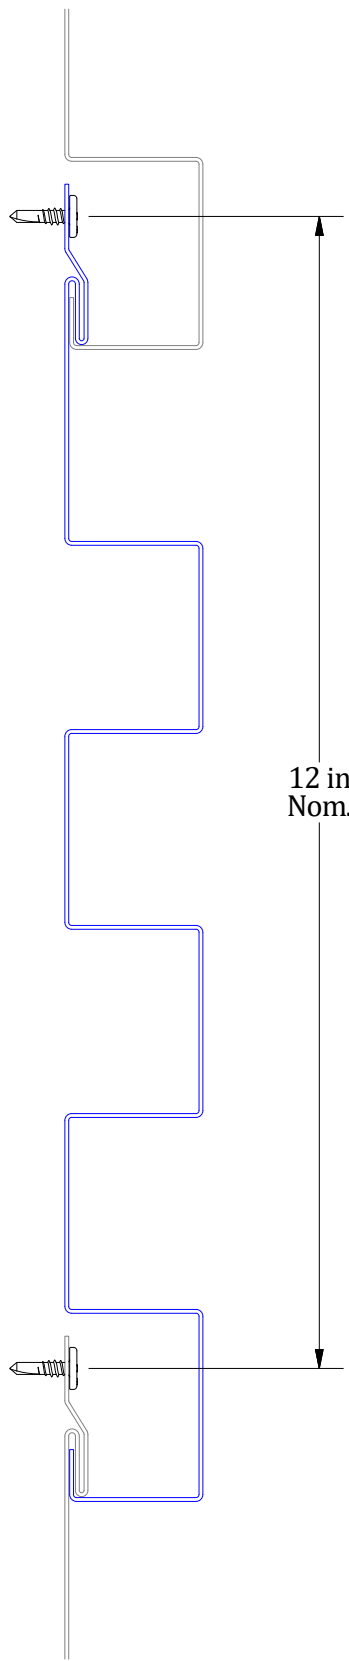

Attach Subgirts into Metal Wall Studs
using appropriate fasteners.

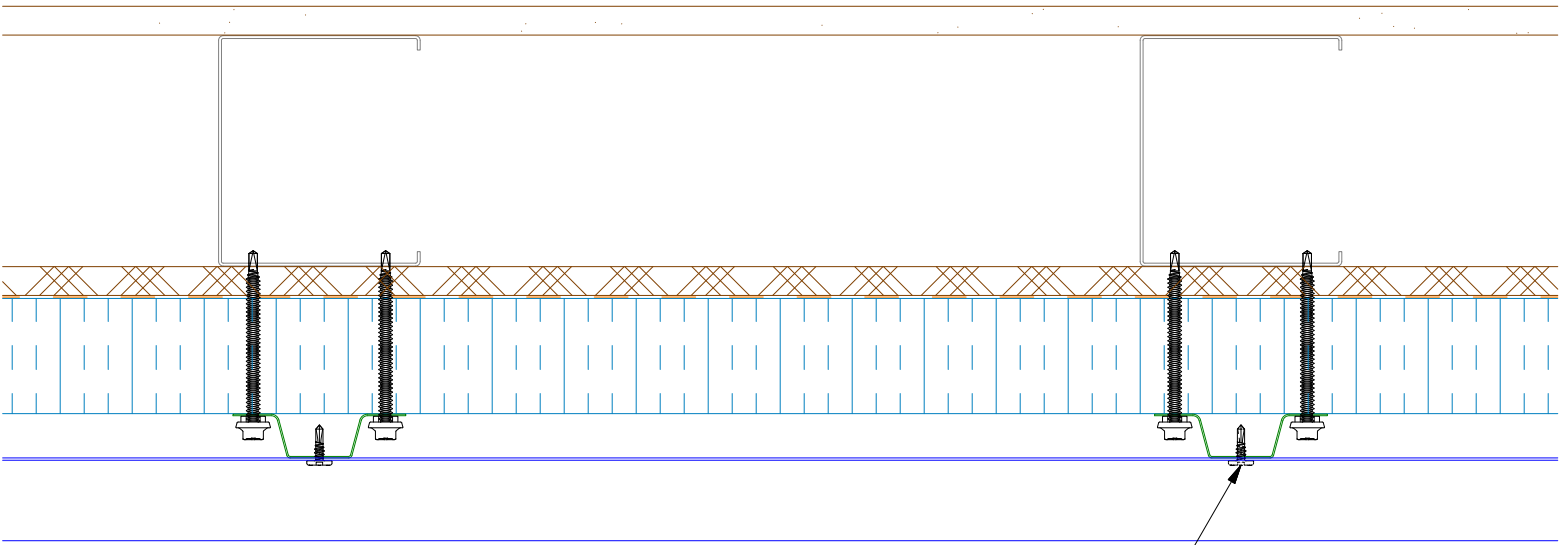

Attach Panel System to Subgirts using
#10 x 5/8" Pancake Head Screws.

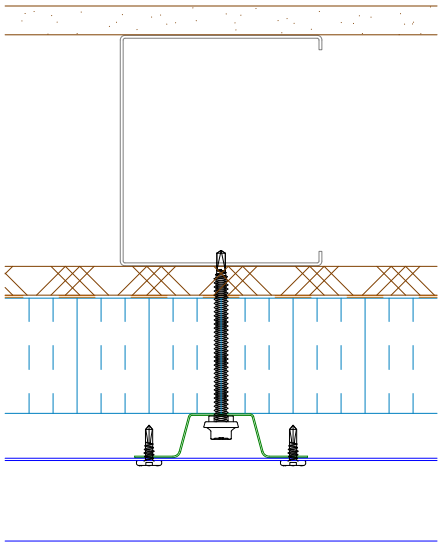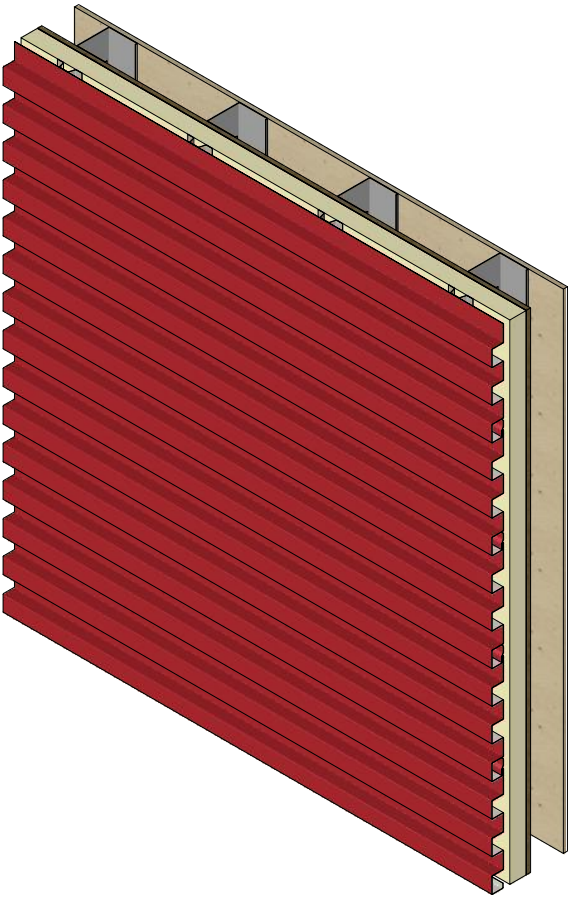

Alternative Subgirt Orientation

Notes:



ATAS International, Inc.
Sustainable Solutions For A Better Future
www.atas.com | info@atas.com
800.468.1441

DWG TITLE:
Open Framing Installation Detail

DWG No: 0

DWG BY: M.L.P.

DWG DATE: 1/21/2026

APP BY: D.S.

APP DATE: 1/21/2026

REVISIONS

REV. NO. 0

DATE 1/21/2026

DESCRIPTION OF REVISION Initial Release

BY M.L.P.

APP D.S.

PANELS/PRODUCT: MetaFlex

SHEET SIZE: B

SCALE: X : X

0	1/21/2026	Initial Release	M.L.P.	D.S.
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP