

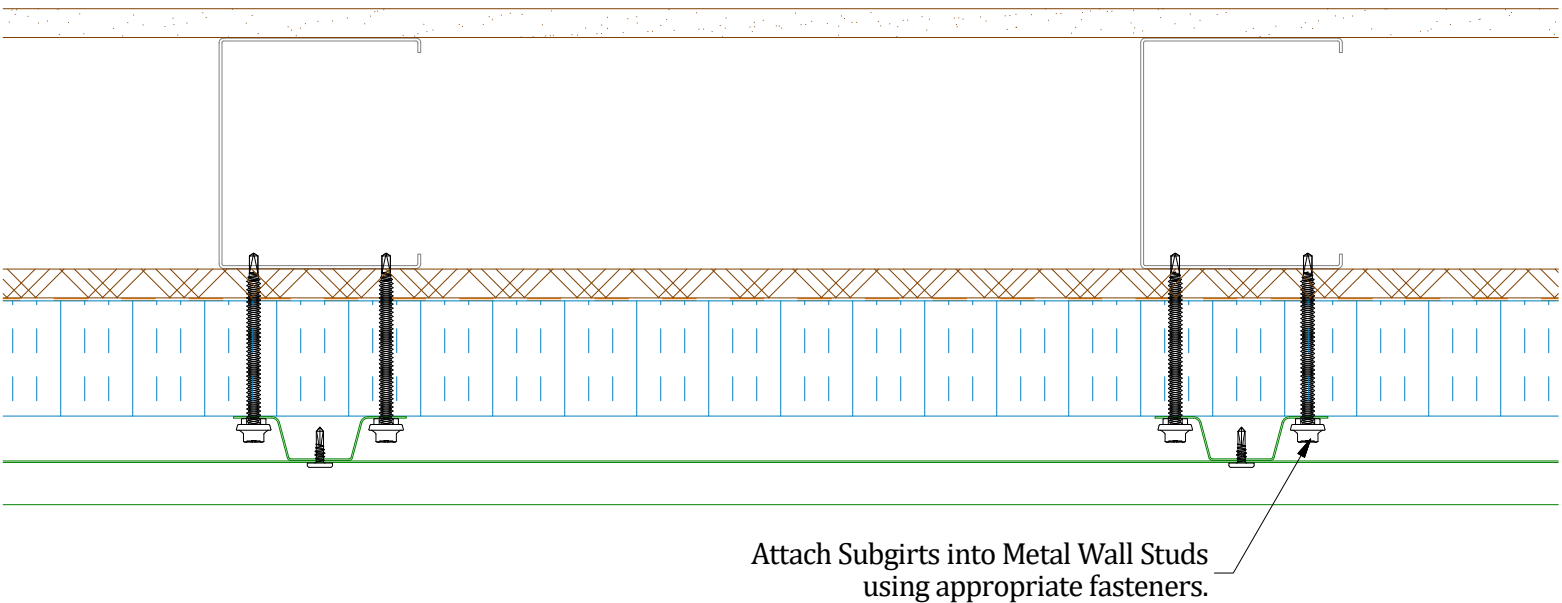




Vertical Panel

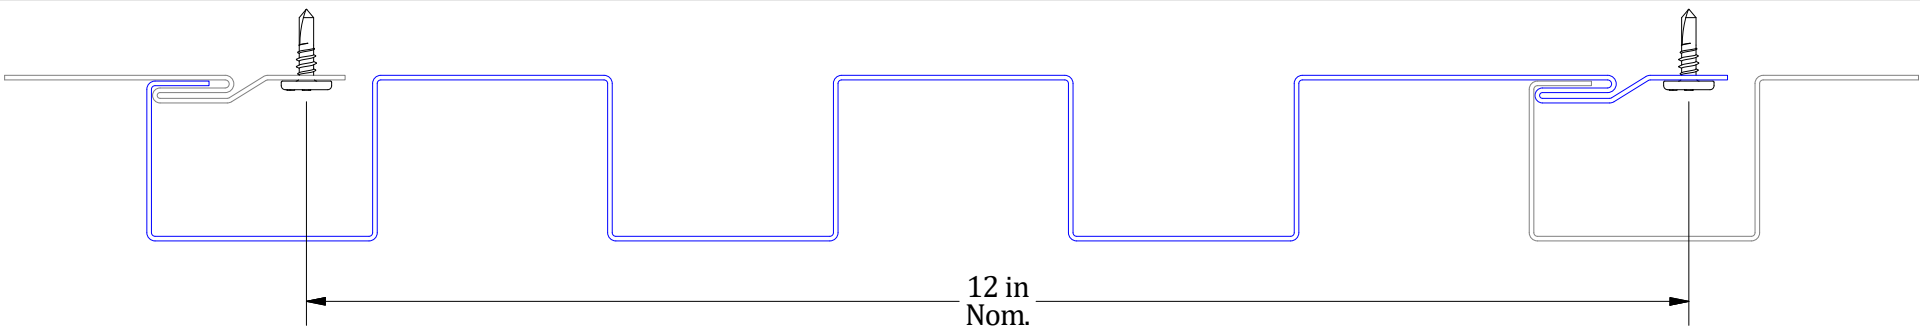

Attach Subgirts into Metal Wall Studs using appropriate fasteners.

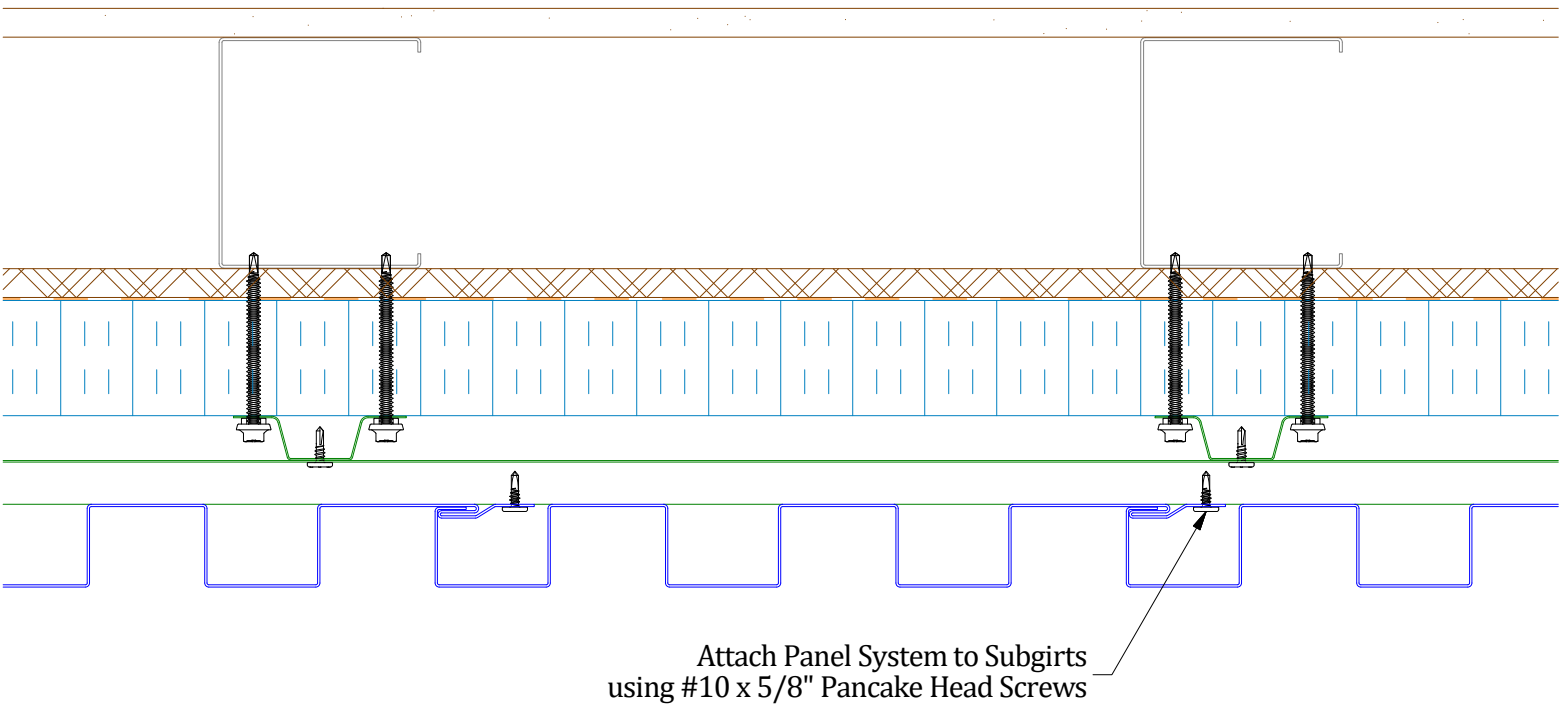

Attach Panel System to Subgirts using #10 x 5/8" Pancake Head Screws

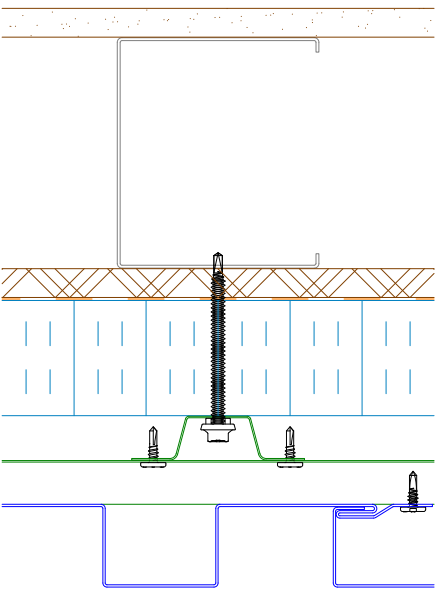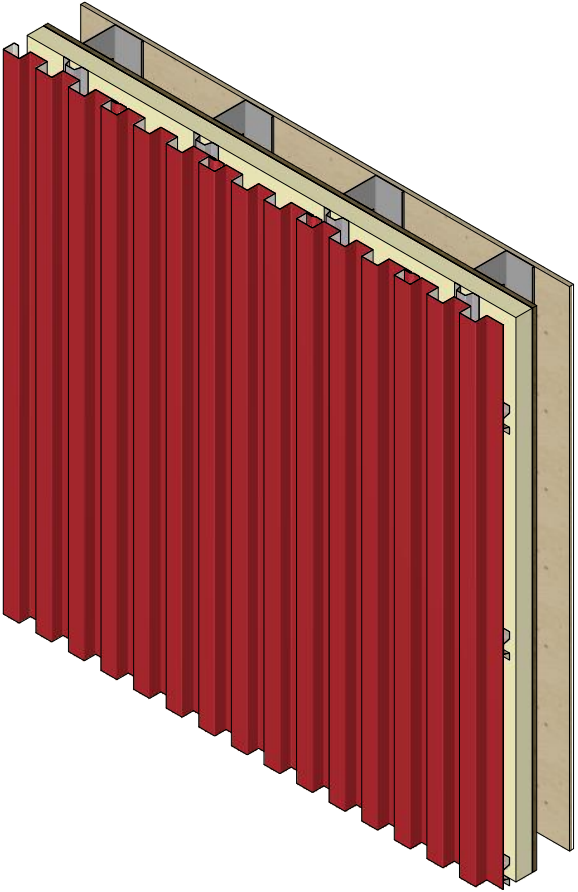

Alternative Subgirt Orientation

Notes:

0	1/21/2026	Initial Release	M.L.P.	D.S.	
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	

DWG TITLE: Open Framing Installation Detail		
DWG No:	DWG BY: M.L.P.	DWG DATE: 1/21/2026
PANELS/PRODUCT:	APP BY: D.S.	APP DATE: 1/21/2026
MetaFlex		SHEET SIZE: B
		SCALE: X : X