

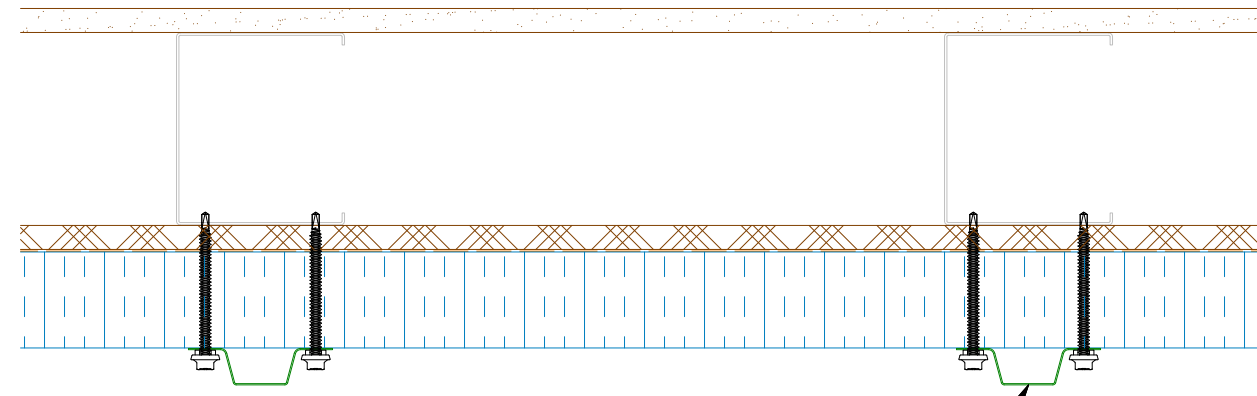




Horizontal Panel

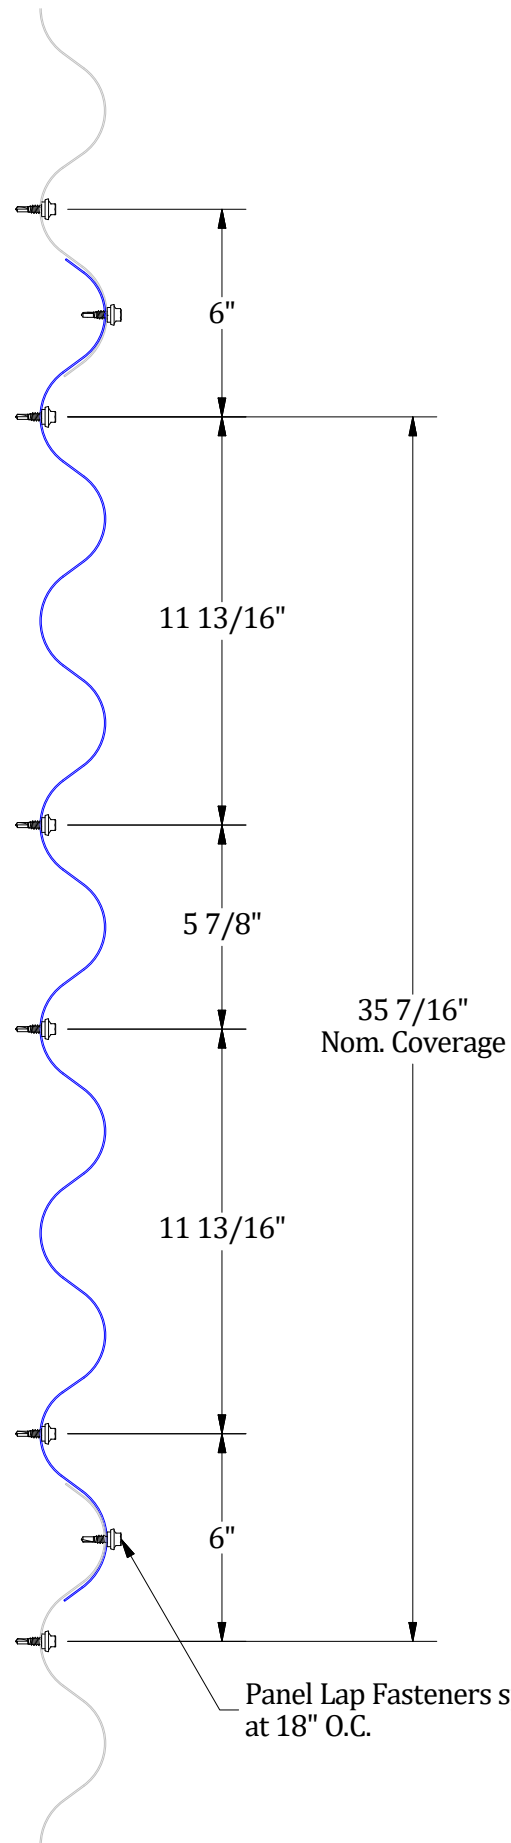

Attach Subgirts into Metal Wall Studs using Appropriate Fasteners

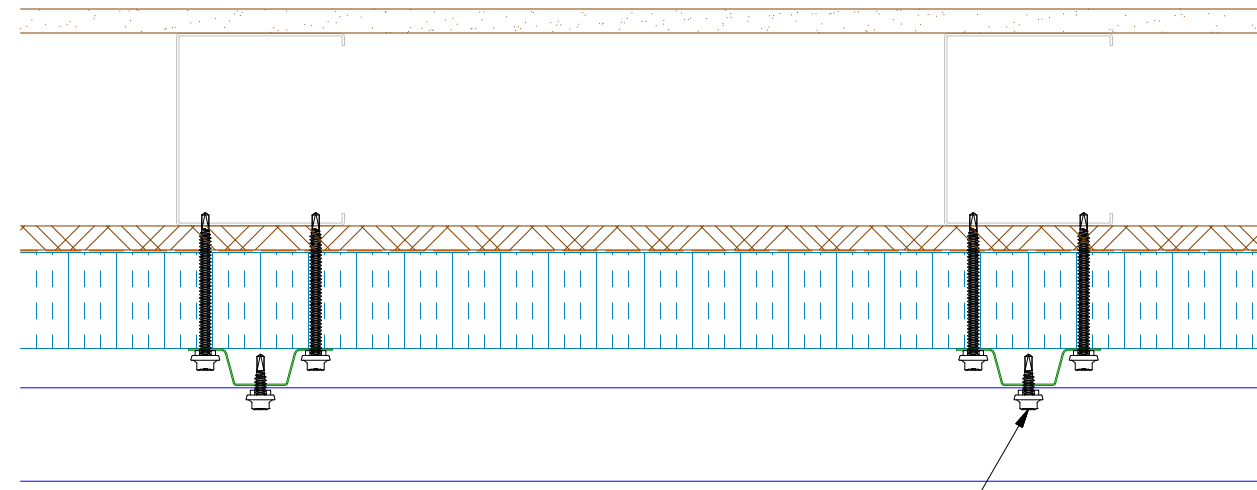

Attach Panel System to Subgirts using #14 x 7/8" Hex Washer Head Fasteners

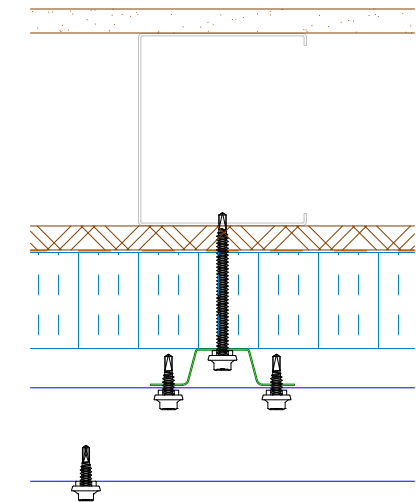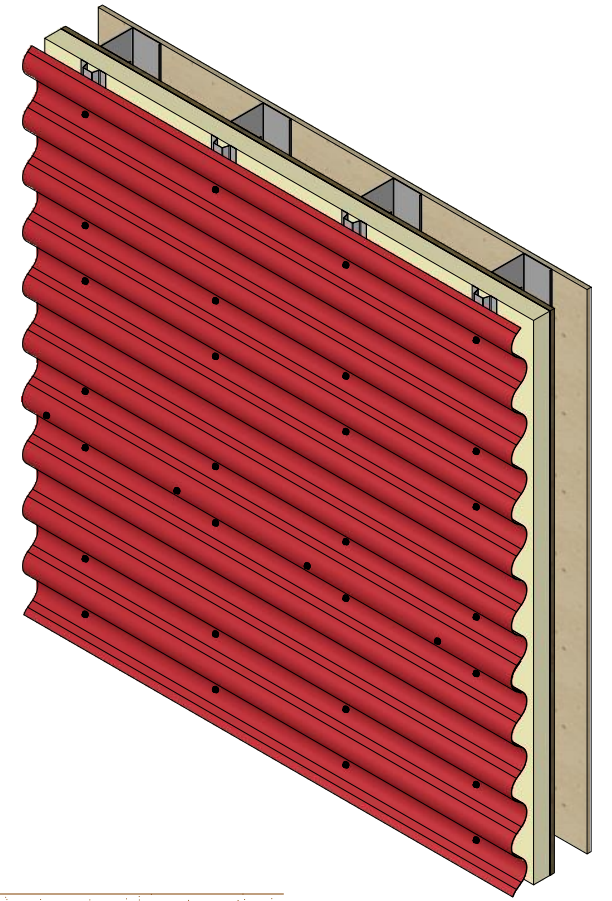

Alternative Subgirt Orientation

Notes:

Panel Lap Fasteners spaced at 18" O.C.

ATAS **ATAS International, Inc.**
 Sustainable Solutions For A Better Future
 www.atas.com | info@atas.com
 800.468.1441

DWG TITLE: **Open Framing Installation Detail**

0	1/12/2026	Initial Release	D.S.	M.L.P.		
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	PANELS/PRODUCT:	Corra-Max
					DWG No:	
					DWG DATE:	1/12/2026
					APP BY:	D.S.
					APP DATE:	1/14/2026
					SHEET SIZE:	B
					SCALE:	X : X