




# Horizontal Panel

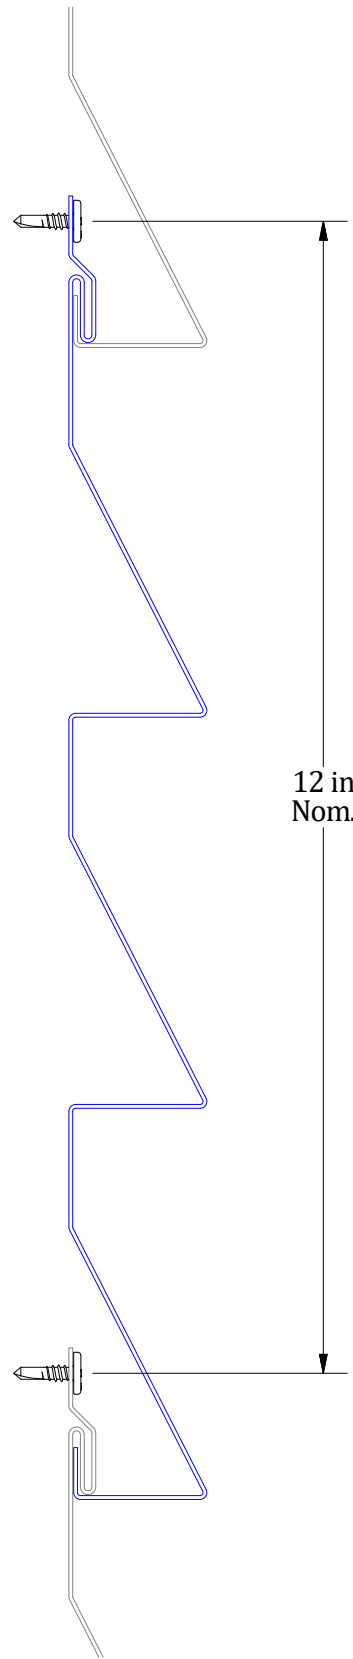



12 in  
Nom.

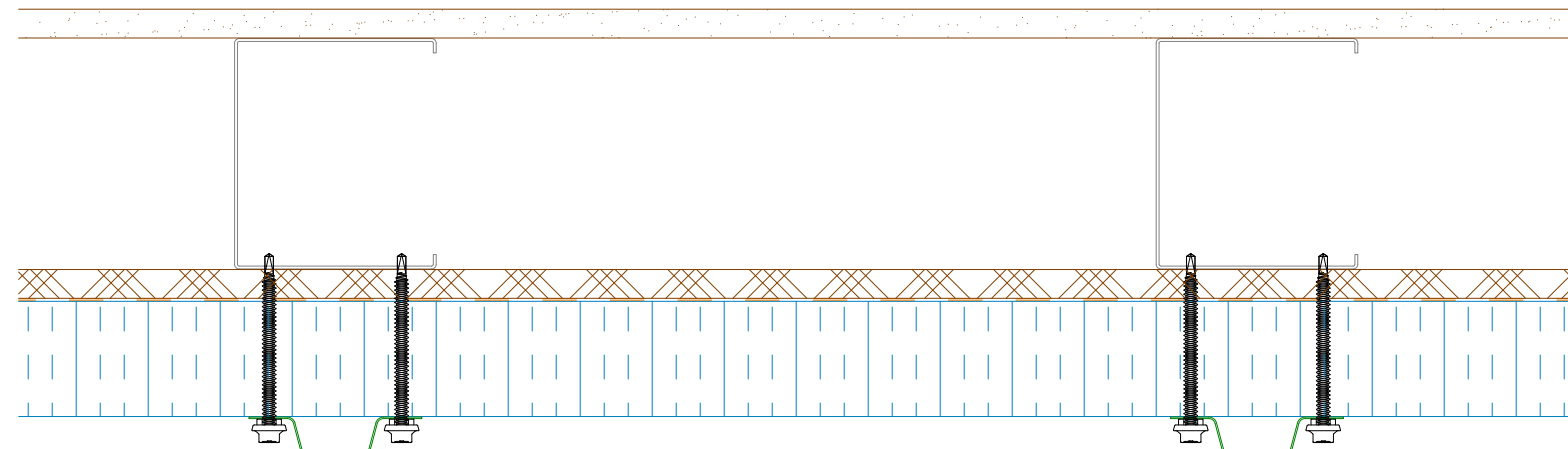

Attach Subgirts into Metal Wall Studs  
using appropriate fasteners.

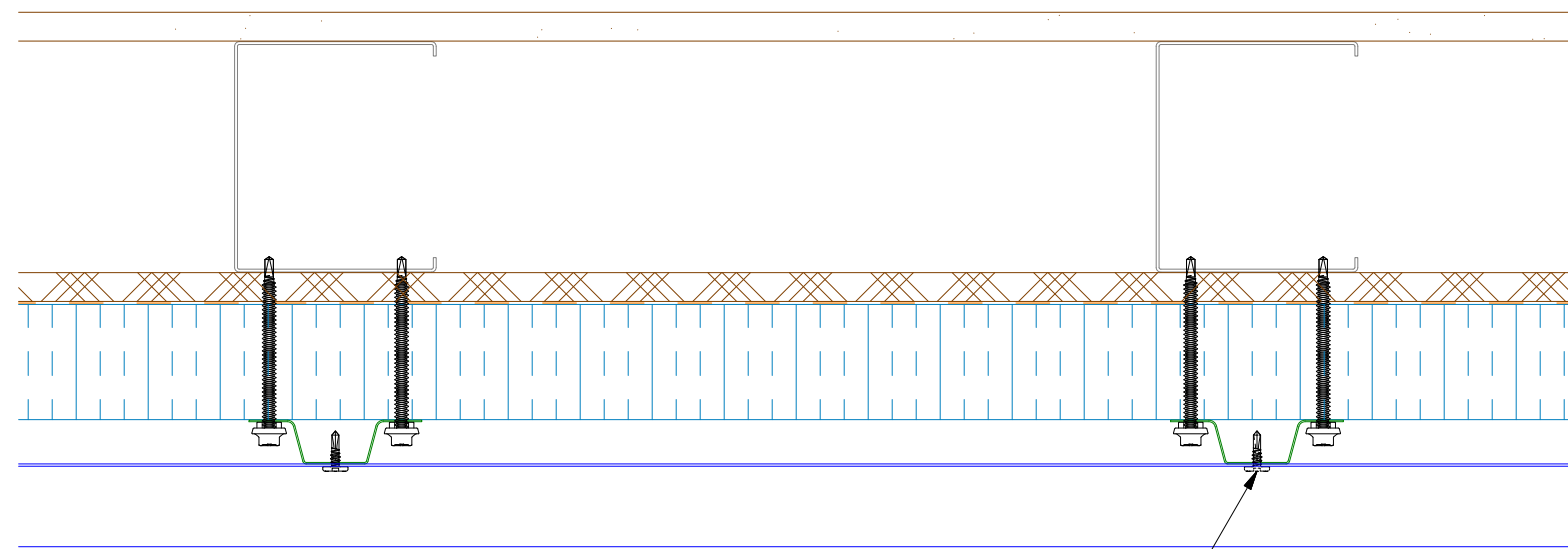

Attach Panel System to Subgirts using  
#10 x 5/8" Pancake Head Screws.

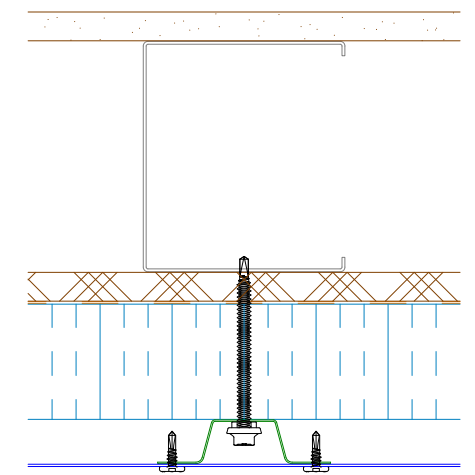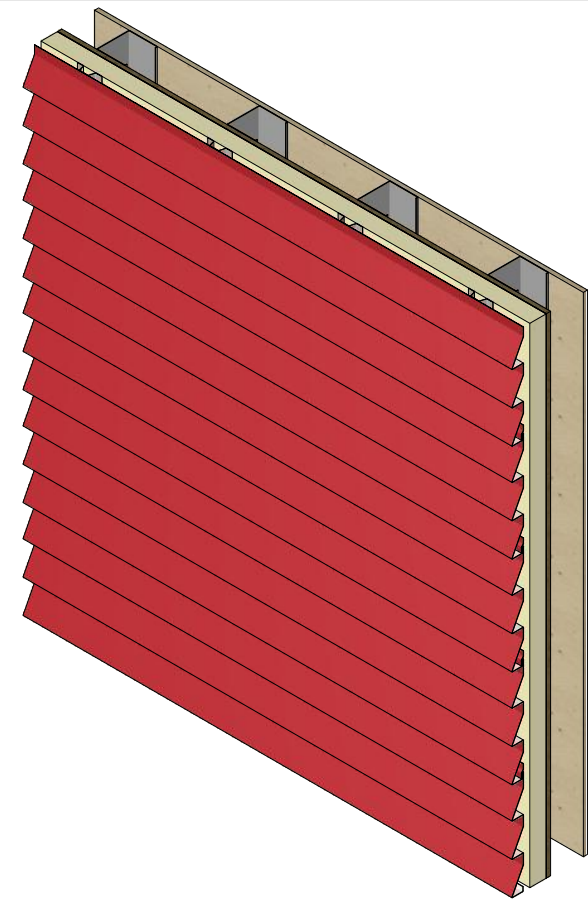

Alternative Subgirt Orientation

## Notes:

**ATAS International, Inc.**  
Sustainable Solutions For A Better Future  
www.atas.com | info@atas.com  
800.468.1441

DWG TITLE: <b>Open Framing Installation Detail</b>		DWG No.:	DWG DATE: 5/1/2026
REV. NO.	DATE	DESCRIPTION OF REVISION	BY APP
0	5/1/2026	Initial Release	M.L.P. D.S.
PANELS/PRODUCT: <b>(MFF) MultiFin</b>		APP BY: D.S.	APP DATE: 5/1/2026
SHEET SIZE: B		SCALE: X : X	