


Horizontal Panel



VIEW A-A

M-Channel
*Cut to size of coverage & installed with appropriate fastener.



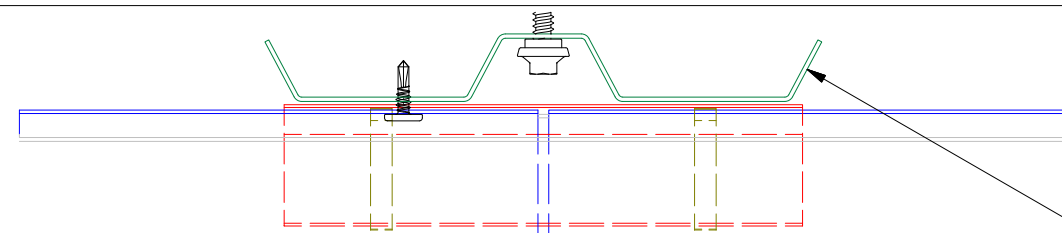


Appropriate Fastener
*Fastened through panel, splice and M-Channel

Non-Hardening Butyl Sealant Bead

Stagger Splice Locations

Appropriate Gap Range
(1/8" - 1/4")

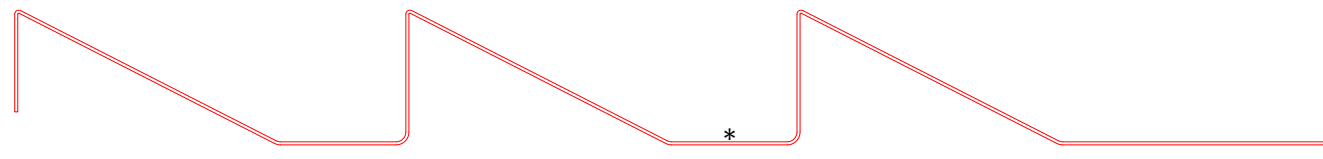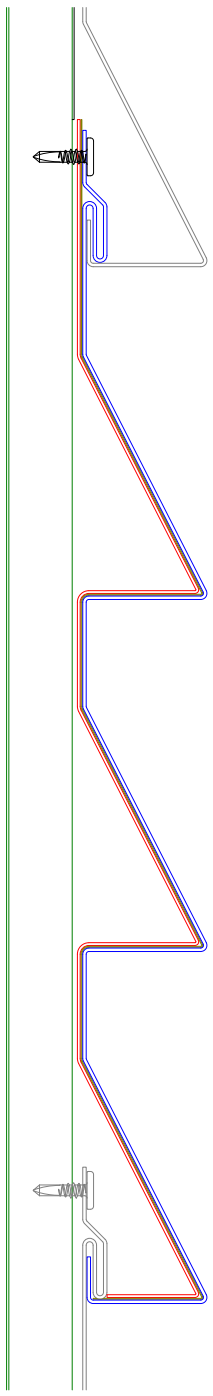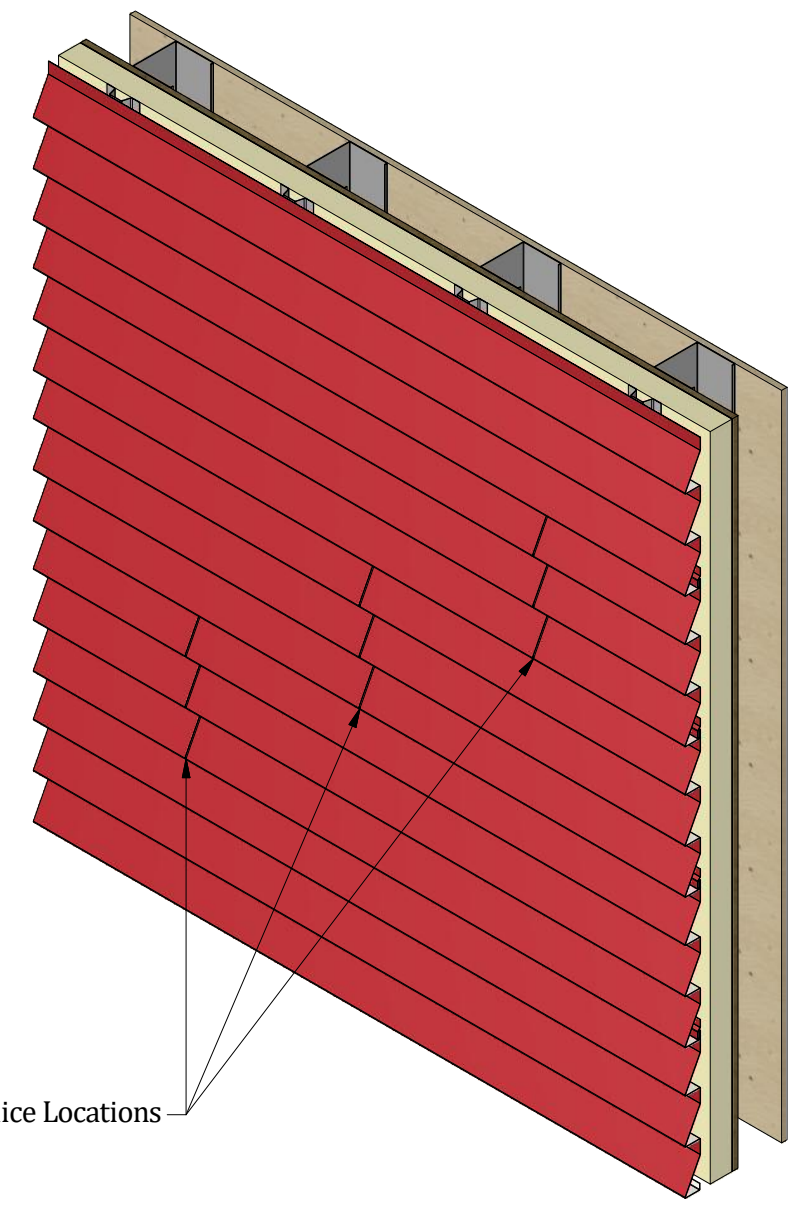

Notes:
1) * denotes color side.
2) Splice Profile varies on Panel Profile.

ATAS International, Inc.
Sustainable Solutions For A Better Future
www.atas.com | info@atas.com
800.468.1441

DWG TITLE: Open Framing Splice Installation		DWG BY: M.L.P.	DWG DATE: 5/1/2026
REV. NO. 0		APP BY: D.S.	APP DATE: 5/1/2026
DATE 5/1/2026	DESCRIPTION OF REVISION Initial Release	BY M.L.P.	APP D.S.
PANELS/PRODUCT: (MFF) MultiFin		SHEET SIZE: B	SCALE: X : X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP
0	5/1/2026	Initial Release	M.L.P.	D.S.